

Closed Loop Stepping System

- Embedded Motion Controller
- Position Table
- CC-Link-compatible Closed Loop Stepping System
- Tuning Not Required, No Hunting
- Low Heat Generation, High Torque



Fast Accurate Smooth Motion


Ezi-SERVO[®] II CC-Link

Closed Loop Stepping System




CC-Link-compatible Motion Control

Ezi-SERVO II CC-Link is a stepper motor control system that supports CC-Link, an RS-485-based open field network. As a CC-Link remote device station, Ezi-SERVO II CC-Link performs various control functions, with motion operations and monitoring handled through device commands within the CC-Link system.

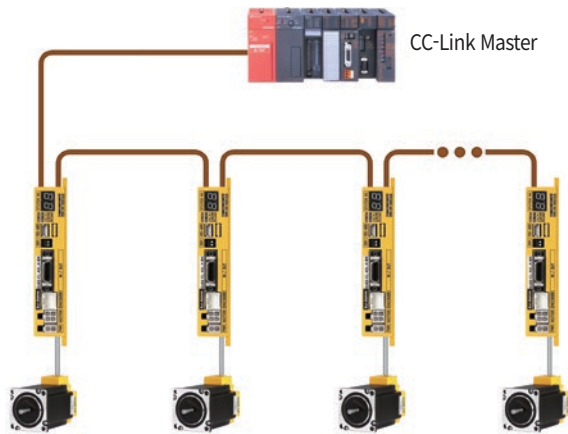

Tuning Not Required

To ensure machine performance, conventional servo systems require the adjustment of its servo's gains as an initial crucial step. Even systems that employ auto-tuning require manual tuning after the system is installed. Ezi-SERVO II employs the best characteristics of the stepper motor to eliminate the need of tedious gain tuning required for conventional closed-loop servo systems. Ezi-SERVO II is especially well suited for low-rigidity loads (e.g., a belt and pulley system) that sometimes require conventional servo systems to use the additional bulky and expensive gearbox.

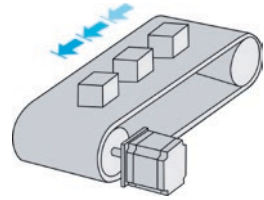



Low Heat Generation / Energy Savings

(Motor Current Control according to load)


Ezi-SERVO II automatically controls motor current according to load. Ezi-SERVO II reduces motor current when motor load is low and increases motor current when load is high. By optimizing the motor current, motor heat can be minimized and energy can be saved.

Closed-Loop System


Ezi-SERVO II is an innovative Closed-Loop System that utilizes a high-resolution motor mounted encoder constantly to monitor the current position. The encoder feedback allows the Ezi-SERVO II to update the current position every 50 μ s. It allows the Ezi-SERVO II drive to compensate for the loss of position, ensuring accurate positioning. For example, due to a sudden load change, a conventional stepper motor and drive could lose a step but Ezi-SERVO II automatically correct the position by encoder feedback.

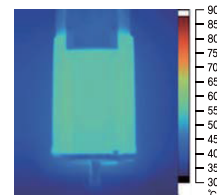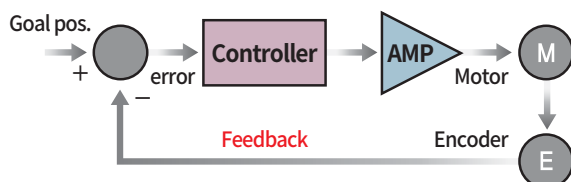

Motor temperature [Measured by Thermal Imaging Camera]

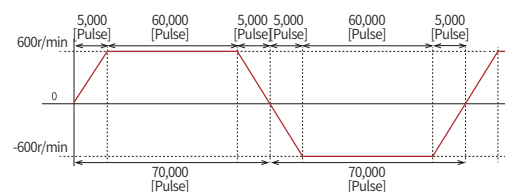

Condition to measure the motor temperature
[4 hours operation, Motor surface temperature saturation]

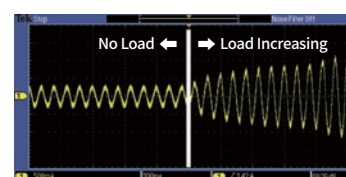


Motor Current

[Example of the Motor Current Control according to load]

High Torque

(Motor Voltage Increasing and Motor Current Setting)

Ezi-SERVO II boosts the voltage supplied to the motor by internal DC-DC Converter. The torque at the high speed is increased. In addition, it is possible to set the Run Current up to 150 %, whereby the torque at low speed is increased. Torque can be improved by about 30 % over the entire speed range.

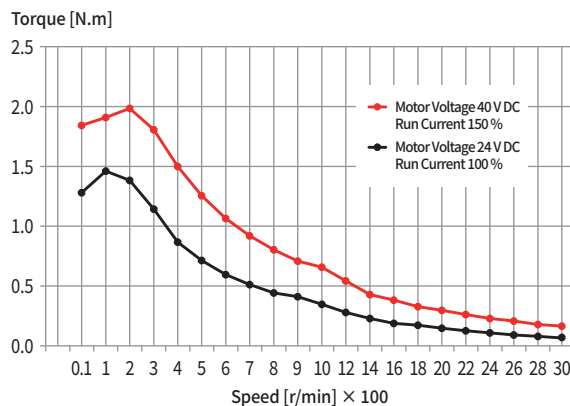


※ Torque is improved by approximately 30 % at both low speeds.

Measured Condition : Drive = Ezi-SERVO II -CL-56L
Motor Voltage = 40 V DC
Input Voltage = 24 V DC

No Hunting


Ezi-SERVO II utilizes the unique characteristics of stepper motors and locks itself into the desired target position, preventing vibration and eliminating Null Hunt which happens to the conventional servo systems.

This feature is especially useful in applications such as vision systems in which system oscillation and vibration could be a problem.

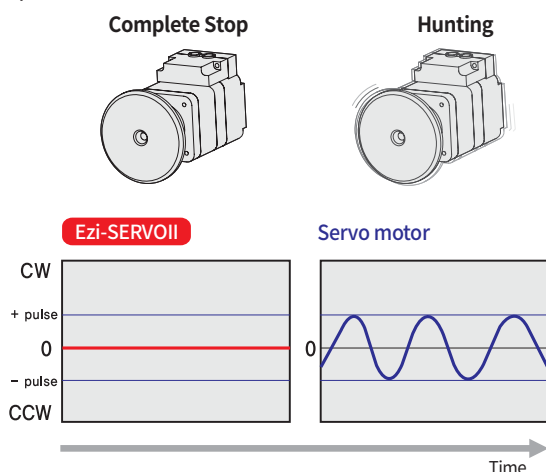

Smooth and Accurate Operation

Ezi-SERVO II is a high-precision servo drive, using a high-resolution encoder with 20,000 pulse/revolution. Unlike a conventional Microstep drive, the on-board high performance MCU (Micro Controller Unit) performs vector control and filtering, producing a smooth rotational control with minimum ripples.

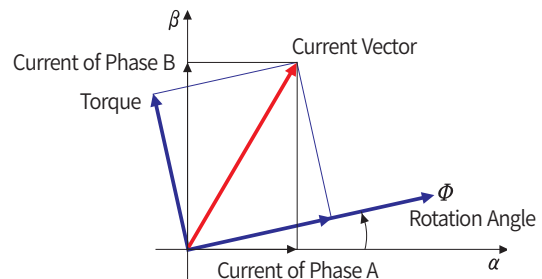


Fast Response

Similar to conventional stepper motors, Ezi-SERVO II instantly synchronizes with command pulses providing fast positional response. Ezi-SERVO II is the optimum choice when zero-speed stability and rapid motions within a short distance are required. Traditional servo motor systems have a natural delay called settling time between the command input signals and the resultant motion because of the constant monitoring of the current position.




High Resolution

The unit of the position command can be divided precisely. (Max. 20,000 pulse/revolution)

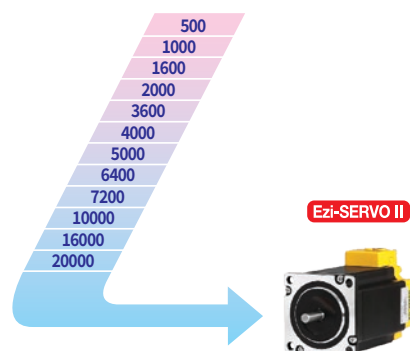


High Torque / Continuous Operation

Compared with common stepper motors and drives, Ezi-SERVO II motion control systems can maintain a high torque state over relatively long period of time. This means that Ezi-SERVO II continuously operates without loss of position under 100 % of the load. Unlike conventional Microstep drives, Ezi-SERVO II exploits continuous high torque operation during high speed motion due to its innovative optimum current phase control.

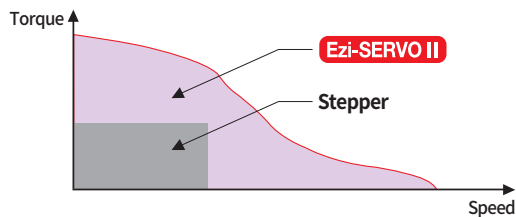

High Speed

The Ezi-SERVO II operates well at high speed without the loss of synchronism or positioning error. Ezi-SERVO II's ability to monitor current position continuously enables the stepper motor to generate high torque, even under a 100 % load condition.

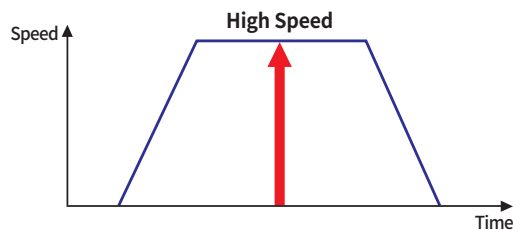

Advantages over Open-Loop Stepper Systems

1. Reliable positioning control without loss of synchronism.
2. Excellent holding torque at standstill, and automatically recovering to the original position even after experiencing positioning error due to external forces, such as mechanical vibration or vertical positional holding.
3. Ezi-SERVO II utilizes 100 % of the full range of rated motor torque, contrary to a conventional open-loop stepper drive that can use up to 50 % of the rated motor torque due to the loss of synchronism.
4. Capability to operate at high speed due to load-dependent current control, open-loop stepper drives use a constant current control at all speed ranges without considering load variations. (Max. Speed : 3,000 r/min)


Advantages over Servo Motor Controller

1. No gain tuning. (Automatic gain adjustment in response to a load change)
2. Maintains the stable holding position without oscillation after completion of positioning.
3. Fast positioning due to the independent control by on-board MCU.
4. Continuous operation during rapid short-stroke movement due to instantaneous positioning.

Motion Controller Features


1. Loop Count

The positioning operation can be repeated for the number of loop counts specified in the Position Table (PT)

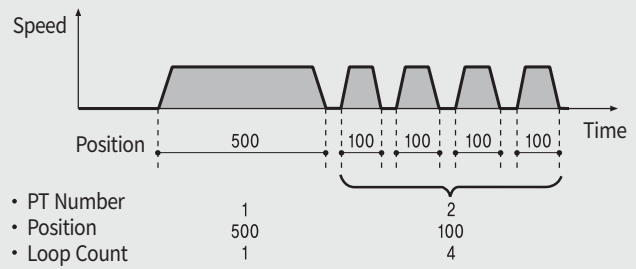


2. Acceleration / Deceleration

To reduce vibration during stop, the acceleration and deceleration times can be set asymmetrically.

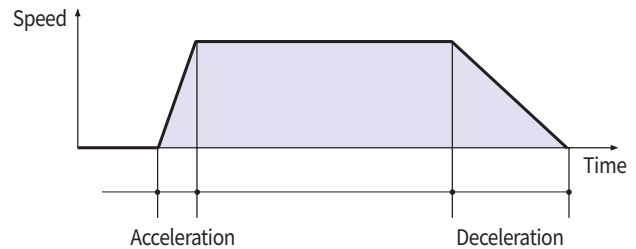


3. Pause

When the Pause signal is turned ON by the upper-level controller, the motion operation is temporarily paused. Once the Pause signal is turned OFF, the motor resumes the motion operation.

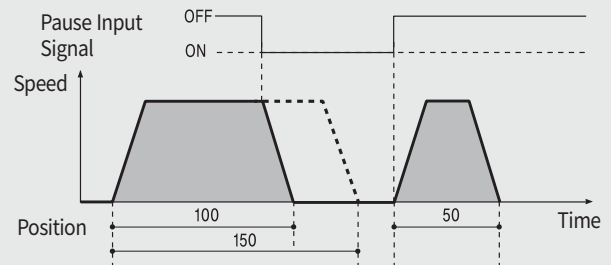


4. Alarm

When an alarm occurs, the type of alarm can be identified by the LED blink count, the 7-segment LED display, or a command from the upper-level controller.

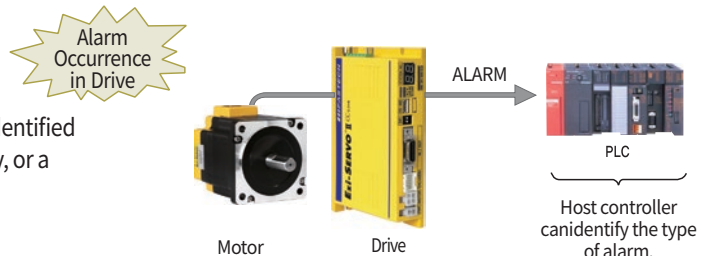

5. Teaching

When the Teaching input signal is ON, the current position value can be saved to the position table.


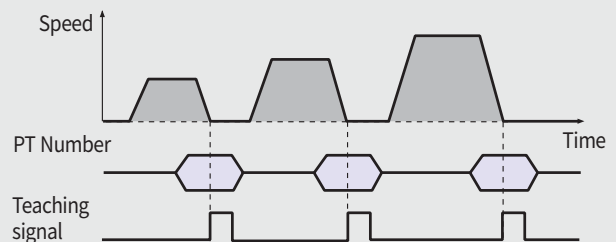


6. Jump

During motion operation, various input signals can be used to move to the next position table to be executed.

- PT Number = #14


Position	-	Next	-	Input 1	Input 2	Input 3	-
10000		100		115	116	117	

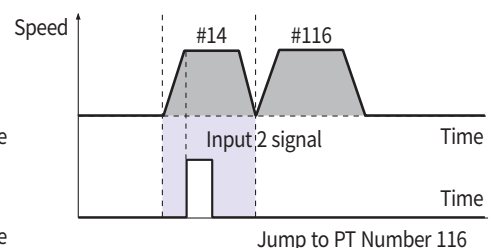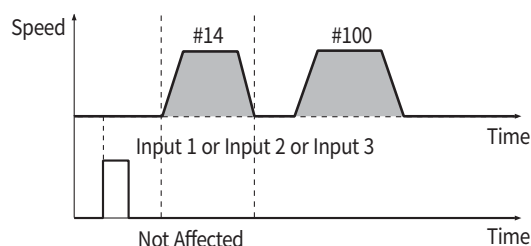

Ezi-SERVO II CC-Link Part Numbering

Standard Combination

Ezi-SERVO II -CL-56L-A-BK-PN05

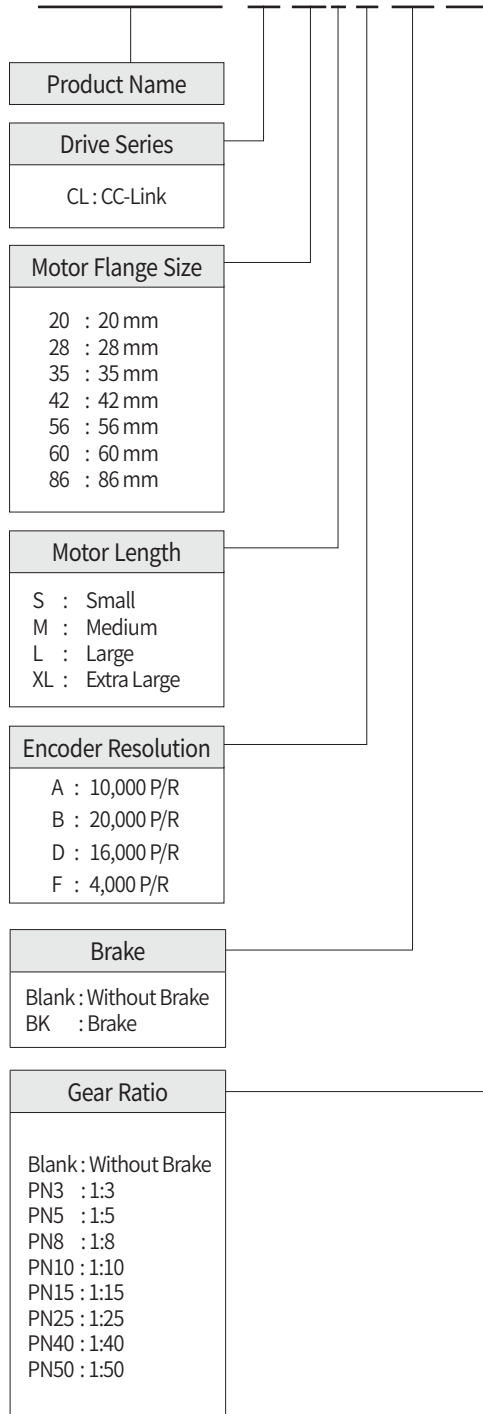

Unit Part Number	Motor Model Number	Drive Model Number
Ezi-SERVO II -CL-20M-F	EzM2-20M-F	EzS2-CL-20M-F
Ezi-SERVO II -CL-20L-F	EzM2-20L-F	EzS2-CL-20L-F
Ezi-SERVO II -CL-28S-D	EzM2-28S-D	EzS2-CL-28S-D
Ezi-SERVO II -CL-28SM-D	EzM2-28SM-D	EzS2-CL-28S-D
Ezi-SERVO II -CL-28M-D	EzM2-28M-D	EzS2-CL-28M-D
Ezi-SERVO II -CL-28MM-D	EzM2-28MM-D	EzS2-CL-28M-D
Ezi-SERVO II -CL-28L-D	EzM2-28L-D	EzS2-CL-28L-D
Ezi-SERVO II -CL-28LM-D	EzM2-28LM-D	EzS2-CL-28L-D
Ezi-SERVO II -CL-35M-D	EzM2-35M-D	EzS2-CL-35M-D
Ezi-SERVO II -CL-35MM-D	EzM2-35MM-D	EzS2-CL-35M-D
Ezi-SERVO II -CL-35L-D	EzM2-35L-D	EzS2-CL-35L-D
Ezi-SERVO II -CL-35LM-D	EzM2-35LM-D	EzS2-CL-35L-D
Ezi-SERVO II -CL-42S-A	EzM2-42S-A	EzS2-CL-42S-A
Ezi-SERVO II -CL-42S-B	EzM2-42S-B	EzS2-CL-42S-B
Ezi-SERVO II -CL-42M-A	EzM2-42M-A	EzS2-CL-42M-A
Ezi-SERVO II -CL-42M-B	EzM2-42M-B	EzS2-CL-42M-B
Ezi-SERVO II -CL-42L-A	EzM2-42L-A	EzS2-CL-42L-A
Ezi-SERVO II -CL-42L-B	EzM2-42L-B	EzS2-CL-42L-B
Ezi-SERVO II -CL-42XL-A	EzM2-42XL-A	EzS2-CL-42XL-A
Ezi-SERVO II -CL-42XL-B	EzM2-42XL-B	EzS2-CL-42XL-B
Ezi-SERVO II -CL-56S-A	EzM2-56S-A	EzS2-CL-56S-A
Ezi-SERVO II -CL-56S-B	EzM2-56S-B	EzS2-CL-56S-B
Ezi-SERVO II -CL-56M-A	EzM2-56M-A	EzS2-CL-56M-A
Ezi-SERVO II -CL-56M-B	EzM2-56M-B	EzS2-CL-56M-B
Ezi-SERVO II -CL-56L-A	EzM2-56L-A	EzS2-CL-56L-A
Ezi-SERVO II -CL-56L-B	EzM2-56L-B	EzS2-CL-56L-B
Ezi-SERVO II -CL-60S-A	EzM2-60S-A	EzS2-CL-60S-A
Ezi-SERVO II -CL-60S-B	EzM2-60S-B	EzS2-CL-60S-B
Ezi-SERVO II -CL-60M-A	EzM2-60M-A	EzS2-CL-60M-A
Ezi-SERVO II -CL-60M-B	EzM2-60M-B	EzS2-CL-60M-B
Ezi-SERVO II -CL-60L-A	EzM2-60L-A	EzS2-CL-60L-A
Ezi-SERVO II -CL-60L-B	EzM2-60L-B	EzS2-CL-60L-B
Ezi-SERVO II -CL-86M-A	EzM2-86M-A	EzS2-CL-86M-A
Ezi-SERVO II -CL-86M-B	EzM2-86M-B	EzS2-CL-86M-B
Ezi-SERVO II -CL-86L-A	EzM2-86L-A	EzS2-CL-86L-A
Ezi-SERVO II -CL-86L-B	EzM2-86L-B	EzS2-CL-86L-B
Ezi-SERVO II -CL-86XL-A	EzM2-86XL-A	EzS2-CL-86XL-A
Ezi-SERVO II -CL-86XL-B	EzM2-86XL-B	EzS2-CL-86XL-B

※ When places an order for Stopper type 28 mm, 35 mm motor, please write “M” additionally after motor length of unit product number.
(e.g., Ezi-SERVO II -CL-28LM-D, Ezi-SERVO II -CL-35LM-D)

Combination with Brake

Unit Part Number	Motor Model Number	Drive Model Number
Ezi-SERVO II -CL-42S-A-BK	EzM2-42S-A-BK	EzS2-CL-42S-A
Ezi-SERVO II -CL-42S-B-BK	EzM2-42S-B-BK	EzS2-CL-42S-B
Ezi-SERVO II -CL-42M-A-BK	EzM2-42M-A-BK	EzS2-CL-42M-A
Ezi-SERVO II -CL-42M-B-BK	EzM2-42M-B-BK	EzS2-CL-42M-B
Ezi-SERVO II -CL-42L-A-BK	EzM2-42L-A-BK	EzS2-CL-42L-A
Ezi-SERVO II -CL-42L-B-BK	EzM2-42L-B-BK	EzS2-CL-42L-B
Ezi-SERVO II -CL-42XL-A-BK	EzM2-42XL-A-BK	EzS2-CL-42XL-A
Ezi-SERVO II -CL-42XL-B-BK	EzM2-42XL-B-BK	EzS2-CL-42XL-B
Ezi-SERVO II -CL-56S-A-BK	EzM2-56S-A-BK	EzS2-CL-56S-A
Ezi-SERVO II -CL-56S-B-BK	EzM2-56S-B-BK	EzS2-CL-56S-B
Ezi-SERVO II -CL-56M-A-BK	EzM2-56M-A-BK	EzS2-CL-56M-A
Ezi-SERVO II -CL-56M-B-BK	EzM2-56M-B-BK	EzS2-CL-56M-B
Ezi-SERVO II -CL-56L-A-BK	EzM2-56L-A-BK	EzS2-CL-56L-A
Ezi-SERVO II -CL-56L-B-BK	EzM2-56L-B-BK	EzS2-CL-56L-B
Ezi-SERVO II -CL-60S-A-BK	EzM2-60S-A-BK	EzS2-CL-60S-A
Ezi-SERVO II -CL-60S-B-BK	EzM2-60S-B-BK	EzS2-CL-60S-B
Ezi-SERVO II -CL-60M-A-BK	EzM2-60M-A-BK	EzS2-CL-60M-A
Ezi-SERVO II -CL-60M-B-BK	EzM2-60M-B-BK	EzS2-CL-60M-B
Ezi-SERVO II -CL-60L-A-BK	EzM2-60L-A-BK	EzS2-CL-60L-A
Ezi-SERVO II -CL-60L-B-BK	EzM2-60L-B-BK	EzS2-CL-60L-B
Ezi-SERVO II -CL-86M-A-BK	EzM2-86M-A-BK	EzS2-CL-86M-A
Ezi-SERVO II -CL-86M-B-BK	EzM2-86M-B-BK	EzS2-CL-86M-B
Ezi-SERVO II -CL-86L-A-BK	EzM2-86L-A-BK	EzS2-CL-86L-A
Ezi-SERVO II -CL-86L-B-BK	EzM2-86L-B-BK	EzS2-CL-86L-B
Ezi-SERVO II -CL-86XL-A-BK	EzM2-86XL-A-BK	EzS2-CL-86XL-A
Ezi-SERVO II -CL-86XL-B-BK	EzM2-86XL-B-BK	EzS2-CL-86XL-B

Combination with Gearbox

Unit Part Number	Motor Model Number	Drive Model Number	Gear Ratio
Ezi-SERVO II -CL-42S-A-PN3	EzM2-42S-A-PN3	EzS2-CL42S-A	1:3
Ezi-SERVO II -CL-42S-B-PN3	EzM2-42S-B-PN3	EzS2-CL42S-B	
Ezi-SERVO II -CL-42S-A-PN5	EzM2-42S-A-PN5	EzS2-CL42S-A	1:5
Ezi-SERVO II -CL-42S-B-PN5	EzM2-42S-B-PN5	EzS2-CL42S-B	
Ezi-SERVO II -CL-42S-A-PN8	EzM2-42S-A-PN8	EzS2-CL42S-A	1:8
Ezi-SERVO II -CL-42S-B-PN8	EzM2-42S-B-PN8	EzS2-CL42S-B	
Ezi-SERVO II -CL-42S-A-PN10	EzM2-42S-A-PN10	EzS2-CL42S-A	1:10
Ezi-SERVO II -CL-42S-B-PN10	EzM2-42S-B-PN10	EzS2-CL42S-B	
Ezi-SERVO II -CL-42S-A-PN15	EzM2-42S-A-PN15	EzS2-CL42S-A	1:15
Ezi-SERVO II -CL-42S-B-PN15	EzM2-42S-B-PN15	EzS2-CL42S-B	
Ezi-SERVO II -CL-42S-A-PN25	EzM2-42S-A-PN25	EzS2-CL42S-A	1:25
Ezi-SERVO II -CL-42S-B-PN25	EzM2-42S-B-PN25	EzS2-CL42S-B	
Ezi-SERVO II -CL-42S-A-PN40	EzM2-42S-A-PN40	EzS2-CL42S-A	1:40
Ezi-SERVO II -CL-42S-B-PN40	EzM2-42S-B-PN40	EzS2-CL42S-B	
Ezi-SERVO II -CL-42S-A-PN50	EzM2-42S-A-PN50	EzS2-CL42S-A	1:50
Ezi-SERVO II -CL-42S-B-PN50	EzM2-42S-B-PN50	EzS2-CL42S-B	
Ezi-SERVO II -CL-42M-A-PN3	EzM2-42M-A-PN3	EzS2-CL42M-A	1:3
Ezi-SERVO II -CL-42M-B-PN3	EzM2-42M-B-PN3	EzS2-CL42M-B	
Ezi-SERVO II -CL-42M-A-PN5	EzM2-42M-A-PN5	EzS2-CL42M-A	1:5
Ezi-SERVO II -CL-42M-B-PN5	EzM2-42M-B-PN5	EzS2-CL42M-B	
Ezi-SERVO II -CL-42M-A-PN8	EzM2-42M-A-PN8	EzS2-CL42M-A	1:8
Ezi-SERVO II -CL-42M-B-PN8	EzM2-42M-B-PN8	EzS2-CL42M-B	
Ezi-SERVO II -CL-42M-A-PN10	EzM2-42M-A-PN10	EzS2-CL42M-A	1:10
Ezi-SERVO II -CL-42M-B-PN10	EzM2-42M-B-PN10	EzS2-CL42M-B	
Ezi-SERVO II -CL-42M-A-PN15	EzM2-42M-A-PN15	EzS2-CL42M-A	1:15
Ezi-SERVO II -CL-42M-B-PN15	EzM2-42M-B-PN15	EzS2-CL42M-B	
Ezi-SERVO II -CL-42M-A-PN25	EzM2-42M-A-PN25	EzS2-CL42M-A	1:25
Ezi-SERVO II -CL-42M-B-PN25	EzM2-42M-B-PN25	EzS2-CL42M-B	
Ezi-SERVO II -CL-42M-A-PN40	EzM2-42M-A-PN40	EzS2-CL42M-A	1:40
Ezi-SERVO II -CL-42M-B-PN40	EzM2-42M-B-PN40	EzS2-CL42M-B	
Ezi-SERVO II -CL-42M-A-PN50	EzM2-42M-A-PN50	EzS2-CL42M-A	1:50
Ezi-SERVO II -CL-42M-B-PN50	EzM2-42M-B-PN50	EzS2-CL42M-B	

Combination with Gearbox



Unit Part Number	Motor Model Number	Drive Model Number	Gear Ratio
Ezi-SERVO II -CL-42L-A-PN3	EzM2-42L-A-PN3	EzS2-CL-42L-A	1:3
Ezi-SERVO II -CL-42L-B-PN3	EzM2-42L-B-PN3	EzS2-CL-42L-B	
Ezi-SERVO II -CL-42L-A-PN5	EzM2-42L-A-PN5	EzS2-CL-42L-A	1:5
Ezi-SERVO II -CL-42L-B-PN5	EzM2-42L-B-PN5	EzS2-CL-42L-B	
Ezi-SERVO II -CL-42L-A-PN8	EzM2-42L-A-PN8	EzS2-CL-42L-A	1:8
Ezi-SERVO II -CL-42L-B-PN8	EzM2-42L-B-PN8	EzS2-CL-42L-B	
Ezi-SERVO II -CL-42L-A-PN10	EzM2-42L-A-PN10	EzS2-CL-42L-A	1:10
Ezi-SERVO II -CL-42L-B-PN10	EzM2-42L-B-PN10	EzS2-CL-42L-B	
Ezi-SERVO II -CL-42L-A-PN15	EzM2-42L-A-PN15	EzS2-CL-42L-A	1:15
Ezi-SERVO II -CL-42L-B-PN15	EzM2-42L-B-PN15	EzS2-CL-42L-B	
Ezi-SERVO II -CL-42L-A-PN25	EzM2-42L-A-PN25	EzS2-CL-42L-A	1:25
Ezi-SERVO II -CL-42L-B-PN25	EzM2-42L-B-PN25	EzS2-CL-42L-B	
Ezi-SERVO II -CL-42L-A-PN40	EzM2-42L-A-PN40	EzS2-CL-42L-A	1:40
Ezi-SERVO II -CL-42L-B-PN40	EzM2-42L-B-PN40	EzS2-CL-42L-B	
Ezi-SERVO II -CL-42L-A-PN50	EzM2-42L-A-PN50	EzS2-CL-42L-A	1:50
Ezi-SERVO II -CL-42L-B-PN50	EzM2-42L-B-PN50	EzS2-CL-42L-B	
Ezi-SERVO II -CL-42XL-A-PN3	EzM2-42XL-A-PN3	EzS2-CL-42XL-A	1:3
Ezi-SERVO II -CL-42XL-B-PN3	EzM2-42XL-B-PN3	EzS2-CL-42XL-B	
Ezi-SERVO II -CL-42XL-A-PN5	EzM2-42XL-A-PN5	EzS2-CL-42XL-A	1:5
Ezi-SERVO II -CL-42XL-B-PN5	EzM2-42XL-B-PN5	EzS2-CL-42XL-B	
Ezi-SERVO II -CL-42XL-A-PN8	EzM2-42XL-A-PN8	EzS2-CL-42XL-A	1:8
Ezi-SERVO II -CL-42XL-B-PN8	EzM2-42XL-B-PN8	EzS2-CL-42XL-B	
Ezi-SERVO II -CL-42XL-A-PN10	EzM2-42XL-A-PN10	EzS2-CL-42XL-A	1:10
Ezi-SERVO II -CL-42XL-B-PN10	EzM2-42XL-B-PN10	EzS2-CL-42XL-B	
Ezi-SERVO II -CL-42XL-A-PN15	EzM2-42XL-A-PN15	EzS2-CL-42XL-A	1:15
Ezi-SERVO II -CL-42XL-B-PN15	EzM2-42XL-B-PN15	EzS2-CL-42XL-B	
Ezi-SERVO II -CL-42XL-A-PN25	EzM2-42XL-A-PN25	EzS2-CL-42XL-A	1:25
Ezi-SERVO II -CL-42XL-B-PN25	EzM2-42XL-B-PN25	EzS2-CL-42XL-B	
Ezi-SERVO II -CL-42XL-A-PN40	EzM2-42XL-A-PN40	EzS2-CL-42XL-A	1:40
Ezi-SERVO II -CL-42XL-B-PN40	EzM2-42XL-B-PN40	EzS2-CL-42XL-B	
Ezi-SERVO II -CL-42XL-A-PN50	EzM2-42XL-A-PN50	EzS2-CL-42XL-A	1:50
Ezi-SERVO II -CL-42XL-B-PN50	EzM2-42XL-B-PN50	EzS2-CL-42XL-B	
Ezi-SERVO II -CL-56S-A-PN3	EzM2-56S-A-PN3	EzS2-CL-56S-A	1:3
Ezi-SERVO II -CL-56S-B-PN3	EzM2-56S-B-PN3	EzS2-CL-56S-B	
Ezi-SERVO II -CL-56S-A-PN5	EzM2-56S-A-PN5	EzS2-CL-56S-A	1:5
Ezi-SERVO II -CL-56S-B-PN5	EzM2-56S-B-PN5	EzS2-CL-56S-B	
Ezi-SERVO II -CL-56S-A-PN8	EzM2-56S-A-PN8	EzS2-CL-56S-A	1:8
Ezi-SERVO II -CL-56S-B-PN8	EzM2-56S-B-PN8	EzS2-CL-56S-B	
Ezi-SERVO II -CL-56S-A-PN10	EzM2-56S-A-PN10	EzS2-CL-56S-A	1:10
Ezi-SERVO II -CL-56S-B-PN10	EzM2-56S-B-PN10	EzS2-CL-56S-B	
Ezi-SERVO II -CL-56S-A-PN15	EzM2-56S-A-PN15	EzS2-CL-56S-A	1:15
Ezi-SERVO II -CL-56S-B-PN15	EzM2-56S-B-PN15	EzS2-CL-56S-B	
Ezi-SERVO II -CL-56S-A-PN25	EzM2-56S-A-PN25	EzS2-CL-56S-A	1:25
Ezi-SERVO II -CL-56S-B-PN25	EzM2-56S-B-PN25	EzS2-CL-56S-B	
Ezi-SERVO II -CL-56S-A-PN40	EzM2-56S-A-PN40	EzS2-CL-56S-A	1:40
Ezi-SERVO II -CL-56S-B-PN40	EzM2-56S-B-PN40	EzS2-CL-56S-B	
Ezi-SERVO II -CL-56S-A-PN50	EzM2-56S-A-PN50	EzS2-CL-56S-A	1:50
Ezi-SERVO II -CL-56S-B-PN50	EzM2-56S-B-PN50	EzS2-CL-56S-B	
Ezi-SERVO II -CL-56M-A-PN3	EzM2-56M-A-PN3	EzS2-CL-56M-A	1:3
Ezi-SERVO II -CL-56M-B-PN3	EzM2-56M-B-PN3	EzS2-CL-56M-B	
Ezi-SERVO II -CL-56M-A-PN5	EzM2-56M-A-PN5	EzS2-CL-56M-A	1:5
Ezi-SERVO II -CL-56M-B-PN5	EzM2-56M-B-PN5	EzS2-CL-56M-B	
Ezi-SERVO II -CL-56M-A-PN8	EzM2-56M-A-PN8	EzS2-CL-56M-A	1:8
Ezi-SERVO II -CL-56M-B-PN8	EzM2-56M-B-PN8	EzS2-CL-56M-B	
Ezi-SERVO II -CL-56M-A-PN10	EzM2-56M-A-PN10	EzS2-CL-56M-A	1:10
Ezi-SERVO II -CL-56M-B-PN10	EzM2-56M-B-PN10	EzS2-CL-56M-B	
Ezi-SERVO II -CL-56M-A-PN15	EzM2-56M-A-PN15	EzS2-CL-56M-A	1:15
Ezi-SERVO II -CL-56M-B-PN15	EzM2-56M-B-PN15	EzS2-CL-56M-B	
Ezi-SERVO II -CL-56M-A-PN25	EzM2-56M-A-PN25	EzS2-CL-56M-A	1:25
Ezi-SERVO II -CL-56M-B-PN25	EzM2-56M-B-PN25	EzS2-CL-56M-B	
Ezi-SERVO II -CL-56M-A-PN40	EzM2-56M-A-PN40	EzS2-CL-56M-A	1:40
Ezi-SERVO II -CL-56M-B-PN40	EzM2-56M-B-PN40	EzS2-CL-56M-B	
Ezi-SERVO II -CL-56M-A-PN50	EzM2-56M-A-PN50	EzS2-CL-56M-A	1:50
Ezi-SERVO II -CL-56M-B-PN50	EzM2-56M-B-PN50	EzS2-CL-56M-B	

Specifications of Drive

Motor Model		EzM2-20 series	EzM2-28 series	EzM2-35 series	EzM2-42 series	EzM2-56 series	EzM2-60 series	EzM2-86 series					
Drive Model		EzS2-CL-20 series	EzS2-CL-28 series	EzS2-CL-35 series	EzS2-CL-42 series	EzS2-CL-56 series	EzS2-CL-60 series	EzS2-CL-86 series					
Input Voltage		24 V DC ± 10 %							40 ~ 70 V DC				
Control Method		Closed loop control with 32bit MCU											
Current Consumption		Max. 500 mA (Except motor current)											
Operating Condition	Ambient Temperature	· In Use : 0 ~ 50 °C · In Storage: -20 ~ 70 °C											
	Humidity	· In Use : 35 ~ 85 % RH (Non-Condensing) · In Storage: 10 ~ 90 % RH (Non-Condensing)											
	Vib. Resist.	0.5 g											
Function	Rotation Speed	0 ~ 3,000 r/min *1											
	Resolution	Encoder Resolution [P/R]		Configurable Resolution [P/R]									
		4,000		500	1,000	1,600	2,000	3,600	4,000	5,000	6,400	7,200	10,000
		10,000		500	1,000	1,600	2,000	3,600	5,000	6,400	7,200	10,000	
		16,000		500	1,000	1,600	2,000	3,600	5,000	6,400	7,200	10,000	16,000
		20,000		500	1,000	1,600	2,000	3,600	5,000	6,400	7,200	10,000	20,000
	(Selectable by parameter)												
	Error Type	Over Current Error, Over Speed Error, Position Tracking Error, Over Load Error, Over Temperature Error, Over Regenerated Voltage Error, Motor Connect Error, Encoder Connect Error, In-Position Error, ROM Error, Position Overflow Error											
LED Display	Power Status, In-Position Status, Servo ON Status, Alarm Status												
CC-Link	Station Type	Remote Device Station											
	No. of Occupied Station	1 ~ 3 Station											
	Max. No. of Connectable Axis	· 1 Station Occupied: 42 axis · 2 Station Occupied: 32 axis · 3 Station Occupied: 24 axis											
I/O Signal	Input Signals	3 dedicated inputs (LIMIT+, LIMIT-, ORIGIN), 7 programmable inputs (Photocoupler Input)											
	Output Signals	6 programmable outputs (Photocoupler Output), 1 brake signal output											

*1: Up to the resolution of 10,000 P/R, maximum speed can be reached by 3,000 r/min and with the resolution more than 10,000 P/R, maximum speed shall be reduced accordingly.

Dimensions of Drive [mm]

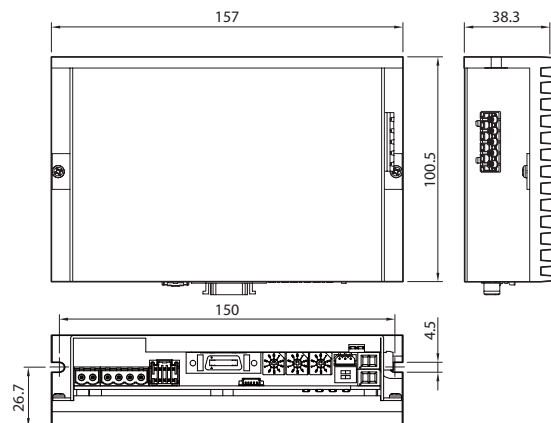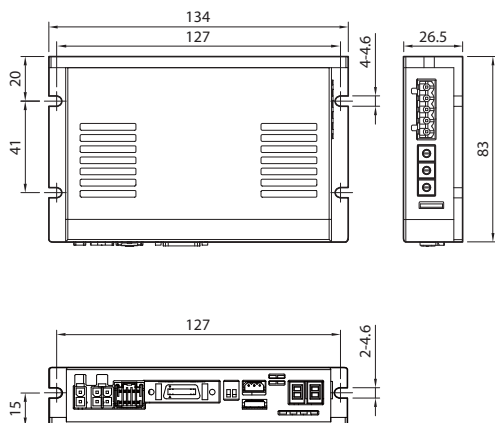

※ 86 mm motor drive (EzS2-CL-86 series)


100

MODEL			UNIT	EzM2-20 series		EzM2-28 series			EzM2-35 series		EzM2-42 series			
				20M	20L	28S	28M	28L	35M	35L	42S	42M	42L	42XL
Drive method			-	Bipolar										
Number of phase			-	2 Phase										
Current per Phase			A/Phase	0.5	0.5	0.95	0.95	0.95	1.5	1.5	1.2	1.2	1.2	1.2
Maximun Holding Torque			N·m	0.016	0.025	0.069	0.098	0.118	0.13	0.23	0.32	0.44	0.5	0.65
Rotor Inertia			g·cm ²	2.5	3.3	9.0	13	18	15	20	35	54	77	114
Weight			kg	0.080	0.104	0.147	0.204	0.232	0.194	0.226	0.294	0.357	0.426	0.564
Length (L)			mm	28	38	32	45	50	32	36	34	40	48	60
Permissible Radial Load	Distance From End of Shaft	3 mm	N	18	18	30	30	30	22	22	22	22	22	22
		8 mm		30	30	38	38	38	26	26	26	26	26	26
		13 mm		-	-	53	53	53	33	33	33	33	33	33
		18 mm		-	-	-	-	-	46	46	46	46	46	46
Permissible Axial Load			N	Lower than motor unit's weight										
Insulation Resistance			MΩ	Min. 100 (When measured with a 500 V DC insulation resistance meter)										
Insulation Class			-	Class B (130 °C)										
Operating Temperature			°C	0 ~ 55										


MODEL			EzM2-56 series			EzM2-60 series			EzM2-86 series			
			UNIT	56S	56M	56L	60S	60M	60L	86M	86L	86XL
Drive method			-	Bipolar								
Number of phase			-	2 Phase								
Current per Phase			A/Phase	3.0	3.0	3.0	4.0	4.0	4.0	6.0	6.0	6.0
Maximun Holding Torque			N·m	0.64	1.0	1.5	0.88	1.28	2.4	4.5	8.5	12
Rotor Inertia			g·cm ²	180	280	520	240	490	690	1800	3600	5400
Weight			kg	0.608	0.784	1.230	0.693	0.856	1.419	2.355	3.941	5.453
Length (L)			mm	46	55	80	47	56	85	78	117	155
Permissible Radial Load	Distance From End of Shaft	3 mm	N	52	52	52	70	70	70	270	270	270
		8 mm		65	65	65	87	87	87	300	300	300
		13 mm		85	85	85	114	114	114	350	350	350
		18 mm		123	123	123	165	165	165	400	400	400
Permissible Axial Load			N	Lower than motor unit's weight								
Insulation Resistance			MΩ	Min. 100 (When measured with a 500 V DC insulation resistance meter)								
Insulation Class			-	Class B (130 °C)								
Operating Temperature			°C	0 ~ 55								

Torque Characteristics of Motor


Ezi-SERVO II -CL-20 series

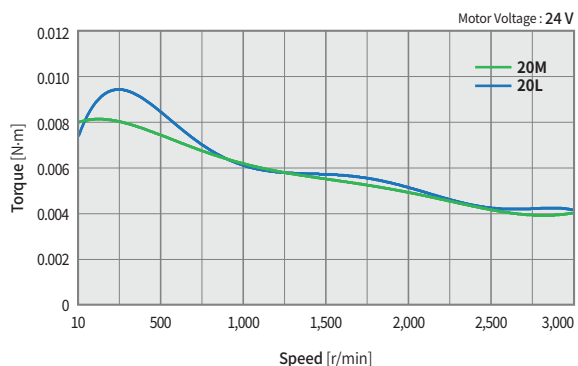


Ezi-SERVO II -CL-28 series

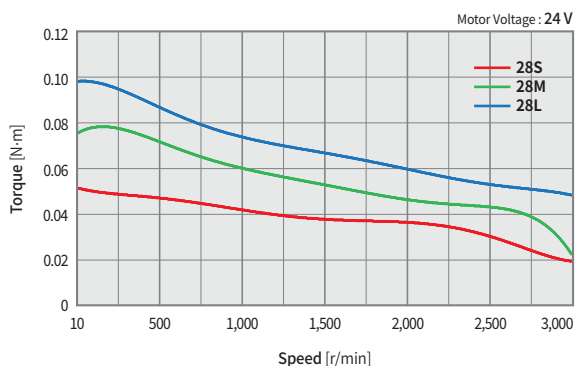


Ezi-SERVO II -CL-35 series

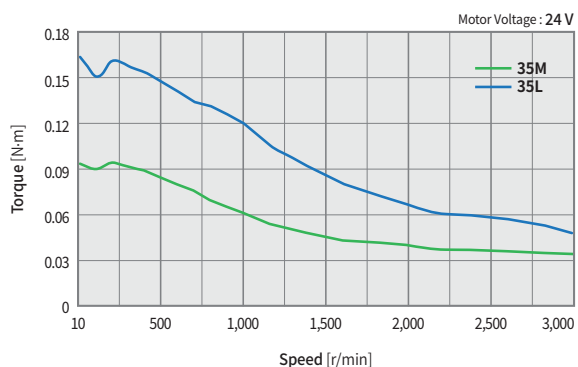


Ezi-SERVO II -CL-42 series

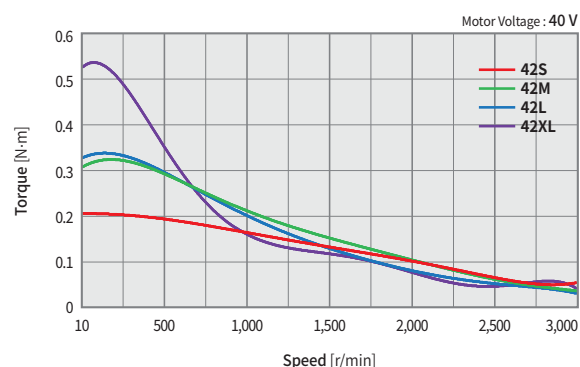


Ezi-SERVO II -CL-56 series

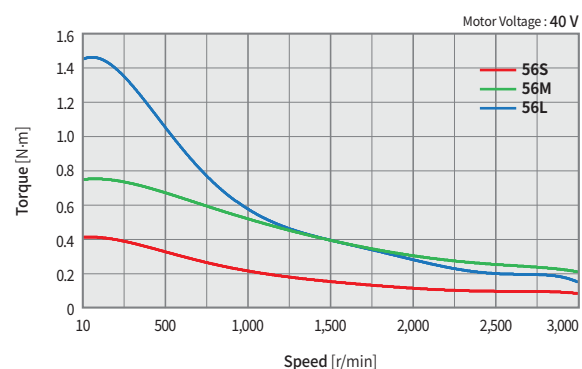


Ezi-SERVO II -CL-60 series

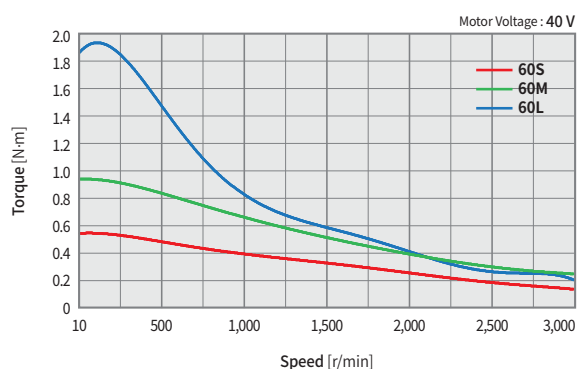

Ezi-SERVO II -CL -86 series

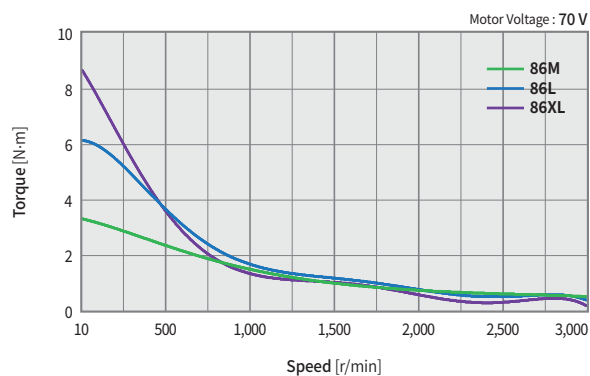


Dimensions of Motor [mm]

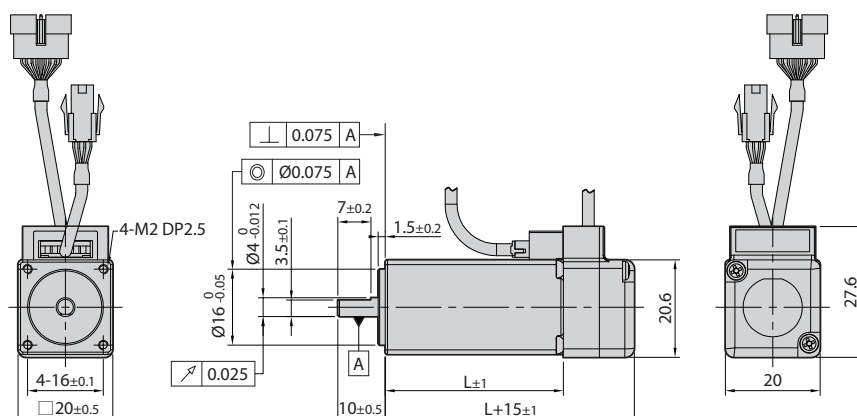


20 mm

Model name	Length (L)
EzM2-20M	27.3
EzM2-20L	37.6

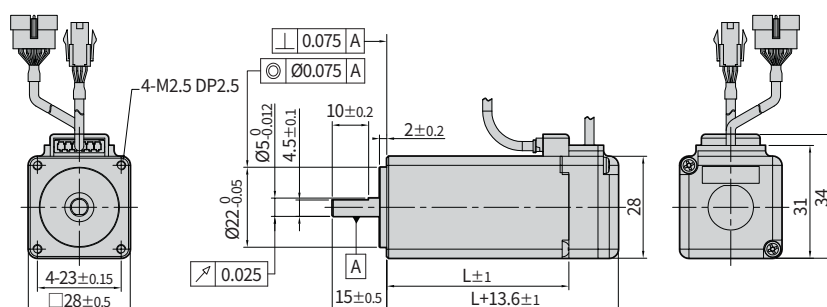

28 mm


Model name	Length (L)
EzM2-28S	32
EzM2-28M	45
EzM2-28L	50

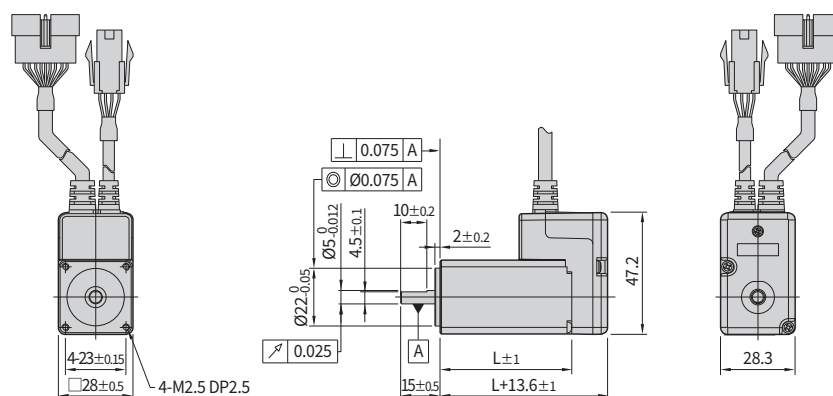

28 mm (Stopper type)

Model name	Length (L)
EzM2-28SM	32
EzM2-28MM	45
EzM2-28LM	50


※ When ordering 28 mm Stopper type of motor, please add "M" after standard motor model number.

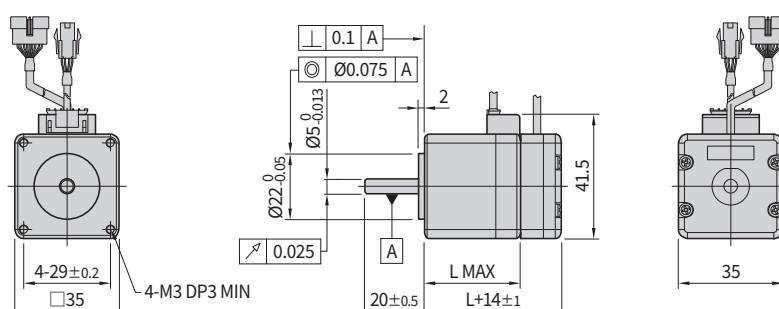

35 mm

Model name	Length (L)
EzM2-35M	32
EzM2-35L	36


Dimensions of Motor [mm]

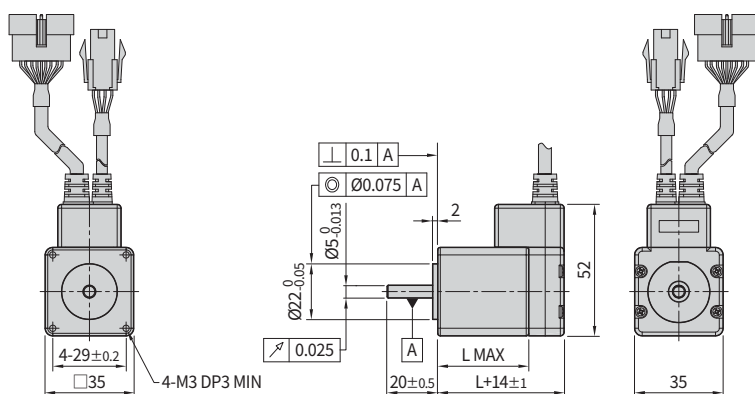

※ When ordering 35 mm Stopper type of motor, please add “M” after standard motor model number.


35 mm
(Stopper type)

Model name	Length (L)
EzM2-35MM	32
EzM2-35LM	36

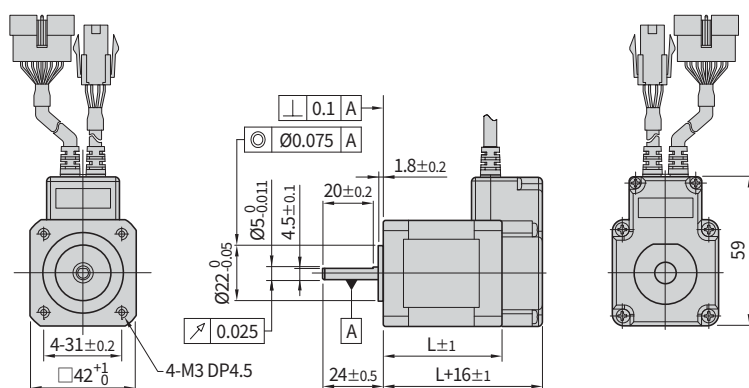

42 mm


Model name	Length (L)
EzM2-42S	34
EzM2-42M	40
EzM2-42L	48
EzM2-42XL	60

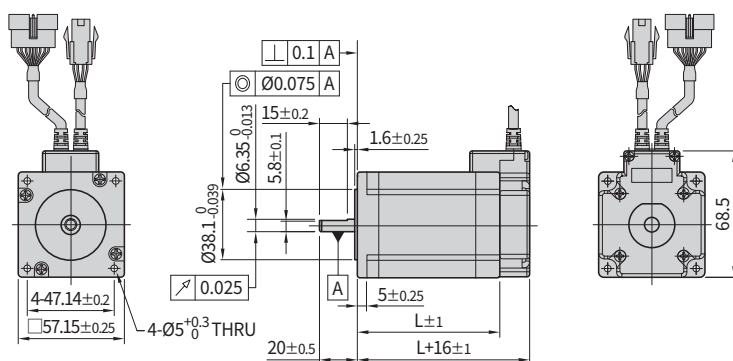

※ There are 2 kinds of size of front shaft diameter for EzM2-56 series as Ø 6.35 and Ø 8.0

56 *mm*


Model name	Length (L)
EzM2-56S	46
EzM2-56M	55
EzM2-56L	80

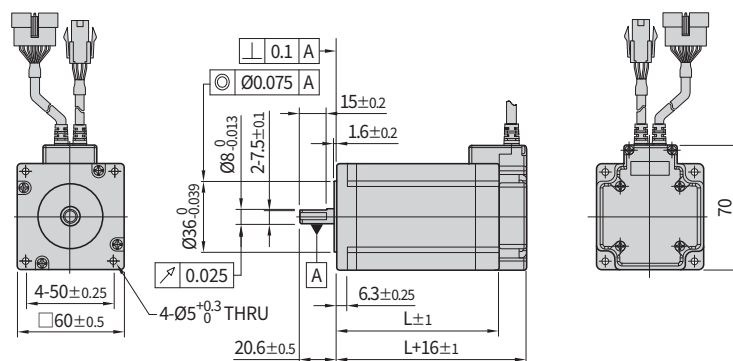

60 mm

Model name	Length (L)
EzM2-60S	47
EzM2-60M	56
EzM2-60L	85

Dimensions of Motor [mm]

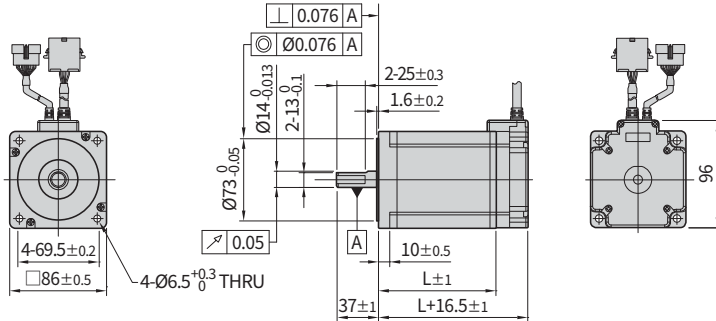

86 mm

Model name	Length (L)
EzM2-86M	78
EzM2-86L	117
EzM2-86XL	155


Specifications of Motor with Brake

Unit Part Number	Motor Model Number	Electromagnetic Brake					Motor Unit Weight [kg]	Permissible Radial Load [N]				Permissible Axial Load [N]
		Type	Voltage Input [V]	Rated Current [A]	Power Consumption [W]	Static Friction Torque [N·m]		Distance from End of Shaft [mm]				
								3	8	13	18	
Ezi-SERVO II -CL-42S-■-BK	EzM2-42S-■-BK	Non-excitation run Type	24 V DC ± 10 %	0.2	5	0.2	0.55	22	26	33	46	Must be Lower than Motor Unit Weight
Ezi-SERVO II -CL-42M-■-BK	EzM2-42M-■-BK						0.62					
Ezi-SERVO II -CL-42L-■-BK	EzM2-42L-■-BK						0.69					
Ezi-SERVO II -CL-42XL-■-BK	EzM2-42XL-■-BK						0.82					
Ezi-SERVO II -CL-56S-■-BK	EzM2-56S-■-BK			0.27	6.6	0.7	1.03	52	65	85	123	
Ezi-SERVO II -CL-56M-■-BK	EzM2-56M-■-BK						1.20					
Ezi-SERVO II -CL-56L-■-BK	EzM2-56L-■-BK						1.65					
Ezi-SERVO II -CL-60S-■-BK	EzM2-60S-■-BK						1.11					
Ezi-SERVO II -CL-60M-■-BK	EzM2-60M-■-BK						1.30	70	87	114	165	
Ezi-SERVO II -CL-60L-■-BK	EzM2-60L-■-BK						1.86					
Ezi-SERVO II -CL-86M-■-BK	EzM2-86M-■-BK			0.54	13	4	3.66	270	300	350	400	
Ezi-SERVO II -CL-86L-■-BK	EzM2-86L-■-BK						5.24					
Ezi-SERVO II -CL-86XL-■-BK	EzM2-86XL-■-BK						6.75					


- * The code of encoder resolution is marked in "■".
- * The electromagnetic brake is intended for holding the position when the power is OFF. Please do not use it for braking during motion.
- * The listed weight refers to the total weight of the motor unit, including the motor and the electromagnetic brake.
- * The motor model name indicates the combined unit of the motor and brake.
- * The motor specifications and torque characteristics are the same as those of the standard motor.
- * An external power supply (24 V DC) is not required when installing the Electric Brake on the 86 mm motor drive.

* Brake Operation Timing Chart

Ezi-SERVO II CC-Link controls Brake by Drive automatically. Please refer to timing chart on the right when Brake is controlled by the upper controller other than using Ezi-SERVO II CC-Link Brake control. Otherwise, Drive might malfunction and loads might fall down. Also, please do not operate Brake during motor operation to prevent damage.

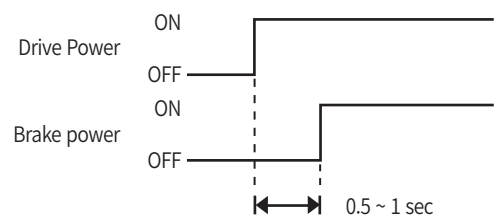


Dimensions of Motor with Brake [mm]

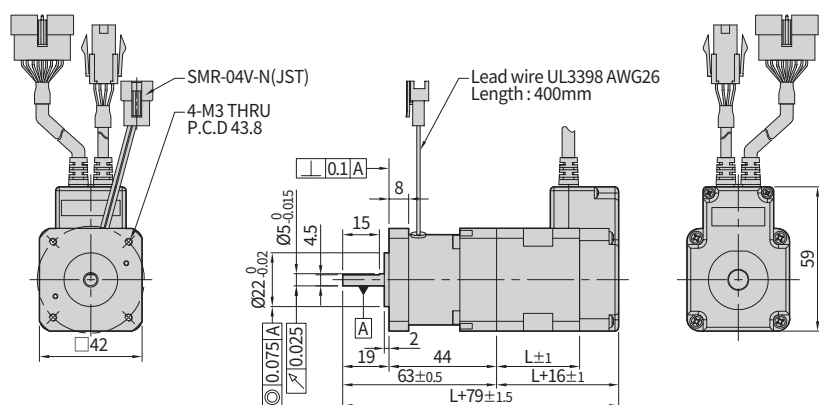


42 mm

Model name	Length (L)
EzM2-42S	34
EzM2-42M	40
EzM2-42L	48
EzM2-42XL	60

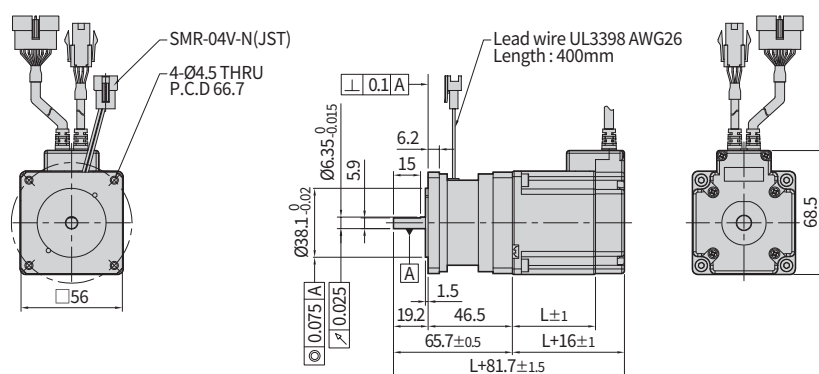


56 mm

Model name	Length (L)
EzM2-56S	46
EzM2-56M	55
EzM2-56L	80

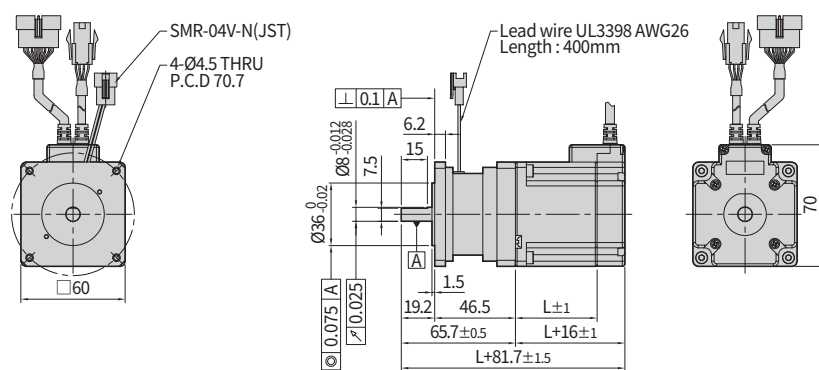

60 mm

Model name	Length (L)
EzM2-60S	47
EzM2-60M	56
EzM2-60L	85

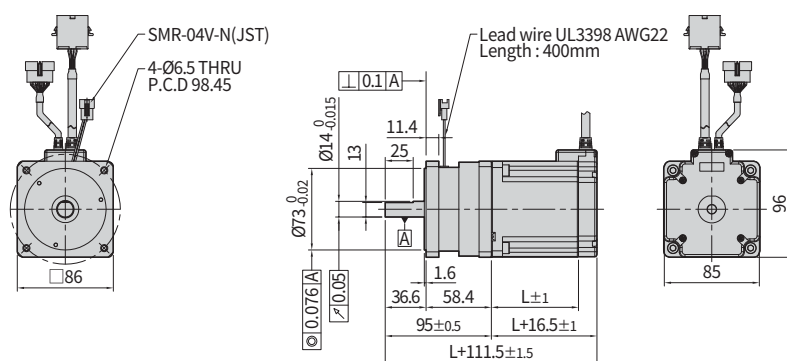

86 mm

Model name	Length (L)
EzM2-86M	78
EzM2-86L	117
EzM2-86XL	155

How to Read Specifications

Unit Part Number	① Maximum Holding Torque [N·m]	② Rotor Inertia Moment [kg·m ²]	③ Backlash [arc-min]	④ Angle Transmission Error [arc-min]	⑤ Gear Ratio	⑥ Resolution (10,000 P/R Standard)	⑦ Permissible Torque [N·m]	⑧ Instantaneous Maximum Torque [N·m]	⑨ Permissible Speed Range [r/min]	⑩ Unit Weight [kg]	⑪ Permissible Radial Load (At Center of Axis) [N]	⑫ Permissible Axial Load [N]
Ezi-SERVO II -CL-42S-■-PN3	0.57	35 x 10 ⁻⁷	3	5	3	0.012 °	6	12	0 ~ 1000	0.76	240	270
Ezi-SERVO II -CL-42S-■-PN5	0.95				5	0.0072 °	9	18	0 ~ 600		290	330
Ezi-SERVO II -CL-42S-■-PN8	1.52				8	0.0045 °	9	18	0 ~ 375		340	410
Ezi-SERVO II -CL-42S-■-PN10	1.90				10	0.0036 °	6	12	0 ~ 300		360	450
Ezi-SERVO II -CL-42S-■-PN15	2.76	5	5	7	15	0.0024 °	6	12	0 ~ 200	0.91	410	540
Ezi-SERVO II -CL-42S-■-PN25	4.60				25	0.00144 °	9	18	0 ~ 120		490	640
Ezi-SERVO II -CL-42S-■-PN40	7.36				40	0.0009 °	9	18	0 ~ 75		570	640
Ezi-SERVO II -CL-42S-■-PN50	9.00				50	0.00072 °	9	18	0 ~ 60		620	640

Description of Specification Items

No.	Item	Description
①	Maximum Holding Torque	This is the maximum torque that can be exerted through the gearbox when the motor is stopped. (Based on 100 % of stop current) Use the torque below the permissible torque of the gearbox.
②	Rotor Inertia Moment	It is the value of the moment of inertia of the motor.
③	Backlash	It is the gap between the gear and the gear, and it is the angle at which the gearbox shaft moves without external force when stopped.
④	Angle Transmission Error	This is the transmission characteristic of the gearbox, which means the difference between the theoretical rotation angle and the actual rotation angle of the output shaft.
⑤	Gear Ratio	It is the value obtained by dividing the number of output rotation by the number of input rotation.
⑥	Resolution	This is the angle at which the gearbox output shaft moves when the motor is driven by 1 pulse.
⑦	Permissible Torque	It refers to the maximum value of the torque that can be continuously applied to the output shaft of the gearbox during constant speed operation. (When the input rotation speed is 3,000 r/min and the lifetime of the motor becomes 20,000 hours)
⑧	Instantaneous Maximum Torque	This is the maximum torque allowed to the output shaft of the gearbox during acceleration/deceleration.
⑨	Permissible Speed Range	It is the range of rotation speed based on the output shaft of the gearbox.
⑩	Unit Weight	It is the sum of the weight of the gearbox and the motor.
⑪	Permissible Radial Load	It is the maximum value of the load applied in the direction perpendicular to the gearbox output shaft.
⑫	Permissible Axial Load	It is the maximum value of the load applied in the axial direction to the gearbox output shaft.

Specifications of Motor with Gearbox

42 mm

Unit Part Number	Maximum Holding Torque [N·m]	Rotor Inertia Moment [kg·m ²]	Backlash [arc-min]	Angle Transmission Error [arc-min]	Gear Ratio	Resolution (10,000 P/R Standard)	Permissible Torque [N·m]	Instantaneous Maximum Torque [N·m]	Permissible Speed Range [r/min]	Unit Weight [kg]	Permissible Radial Load (At Center of Axis) [N]	Permissible Axial Load [N]
Ezi-SERVO II -CL-42S-■-PN3	0.57	35 x 10 ⁻⁷	3	5	3	0.012 °	6	12	0 ~ 1000	0.76	240	270
Ezi-SERVO II -CL-42S-■-PN5	0.95				5	0.0072 °	9	18	0 ~ 600		290	330
Ezi-SERVO II -CL-42S-■-PN8	1.52				8	0.0045 °	9	18	0 ~ 375		340	410
Ezi-SERVO II -CL-42S-■-PN10	1.90				10	0.0036 °	6	12	0 ~ 300		360	450
Ezi-SERVO II -CL-42S-■-PN15	2.76		5	7	15	0.0024 °	6	12	0 ~ 200	0.91	410	540
Ezi-SERVO II -CL-42S-■-PN25	4.60				25	0.00144 °	9	18	0 ~ 120		490	640
Ezi-SERVO II -CL-42S-■-PN40	7.36				40	0.0009 °	9	18	0 ~ 75		570	640
Ezi-SERVO II -CL-42S-■-PN50	9.00				50	0.00072 °	9	18	0 ~ 60		620	640
Ezi-SERVO II -CL-42M-■-PN3	0.85	54 x 10 ⁻⁷	3	5	3	0.012 °	6	12	0 ~ 1000	0.81	240	270
Ezi-SERVO II -CL-42M-■-PN5	1.42				5	0.0072 °	9	18	0 ~ 600		290	330
Ezi-SERVO II -CL-42M-■-PN8	2.28				8	0.0045 °	9	18	0 ~ 375		340	410
Ezi-SERVO II -CL-42M-■-PN10	2.85				10	0.0036 °	6	12	0 ~ 300		360	450
Ezi-SERVO II -CL-42M-■-PN15	4.14		5	7	15	0.0024 °	6	12	0 ~ 200	0.97	410	540
Ezi-SERVO II -CL-42M-■-PN25	6.90				25	0.00144 °	9	18	0 ~ 120		490	640
Ezi-SERVO II -CL-42M-■-PN40	9.00				40	0.0009 °	9	18	0 ~ 75		570	640
Ezi-SERVO II -CL-42M-■-PN50	9.00				50	0.00072 °	9	18	0 ~ 60		620	640
Ezi-SERVO II -CL-42L-■-PN3	0.92	77 x 10 ⁻⁷	3	5	3	0.012 °	6	12	0 ~ 1000	0.89	240	270
Ezi-SERVO II -CL-42L-■-PN5	1.54				5	0.0072 °	9	18	0 ~ 600		290	330
Ezi-SERVO II -CL-42L-■-PN8	2.47				8	0.0045 °	9	18	0 ~ 375		340	410
Ezi-SERVO II -CL-42L-■-PN10	3.09				10	0.0036 °	6	12	0 ~ 300		360	450
Ezi-SERVO II -CL-42L-■-PN15	4.49		5	7	15	0.0024 °	6	12	0 ~ 200	1.04	410	540
Ezi-SERVO II -CL-42L-■-PN25	7.49				25	0.00144 °	9	18	0 ~ 120		490	640
Ezi-SERVO II -CL-42L-■-PN40	9.00				40	0.0009 °	9	18	0 ~ 75		570	640
Ezi-SERVO II -CL-42L-■-PN50	9.00				50	0.00072 °	9	18	0 ~ 60		620	640
Ezi-SERVO II -CL-42XL-■-PN3	1.45	114 x 10 ⁻⁷	3	5	3	0.012 °	6	12	0 ~ 1000	1.03	240	270
Ezi-SERVO II -CL-42XL-■-PN5	2.42				5	0.0072 °	9	18	0 ~ 600		290	330
Ezi-SERVO II -CL-42XL-■-PN8	3.87				8	0.0045 °	9	18	0 ~ 375		340	410
Ezi-SERVO II -CL-42XL-■-PN10	4.84				10	0.0036 °	6	12	0 ~ 300		360	450
Ezi-SERVO II -CL-42XL-■-PN15	6.00		5	7	15	0.0024 °	6	12	0 ~ 200	1.18	410	540
Ezi-SERVO II -CL-42XL-■-PN25	9.00				25	0.00144 °	9	18	0 ~ 120		490	640
Ezi-SERVO II -CL-42XL-■-PN40	9.00				40	0.0009 °	9	18	0 ~ 75		570	640
Ezi-SERVO II -CL-42XL-■-PN50	9.00				50	0.00072 °	9	18	0 ~ 60		620	640

* The code of encoder resolution will be marked in “■”

Specifications of Motor with Gearbox

56 mm

Unit Part Number	Maximum Holding Torque [N·m]	Rotor Inertia Moment [kg·m ²]	Backlash [arc-min]	Angle Transmission Error [arc-min]	Gear Ratio	Resolution (10,000 P/R Standard)	Permissible Torque [N·m]	Instantaneous Maximum Torque [N·m]	Permissible Speed Range [r/min]	Unit Weight [kg]	Permissible Radial Load (At Center of Axis) [N]	Permissible Axial Load [N]
Ezi-SERVO II -CL-56S-■-PN3	1.1	180 x 10 ⁻⁷	3	5	3	0.012 °	18	35	0 ~ 1000	1.75	430	310
Ezi-SERVO II -CL-56S-■-PN5	1.9				5	0.0072 °	27	50	0 ~ 600		510	390
Ezi-SERVO II -CL-56S-■-PN8	3.0				8	0.0045 °	27	50	0 ~ 375		600	480
Ezi-SERVO II -CL-56S-■-PN10	3.8				10	0.0036 °	18	35	0 ~ 300		640	530
Ezi-SERVO II -CL-56S-■-PN15	5.5				15	0.0024 °	18	35	0 ~ 200	2.05	740	630
Ezi-SERVO II -CL-56S-■-PN25	9.3				25	0.00144 °	27	50	0 ~ 120		870	790
Ezi-SERVO II -CL-56S-■-PN40	14.9				40	0.0009 °	27	50	0 ~ 75		1000	970
Ezi-SERVO II -CL-56S-■-PN50	18.6				50	0.00072 °	27	50	0 ~ 60		1100	1100
Ezi-SERVO II -CL-56M-■-PN3	2.0	280 x 10 ⁻⁷	3	5	3	0.012 °	18	35	0 ~ 1000	1.92	430	310
Ezi-SERVO II -CL-56M-■-PN5	3.4				5	0.0072 °	27	50	0 ~ 600		510	390
Ezi-SERVO II -CL-56M-■-PN8	5.4				8	0.0045 °	27	50	0 ~ 375		600	480
Ezi-SERVO II -CL-56M-■-PN10	6.8				10	0.0036 °	18	35	0 ~ 300		640	530
Ezi-SERVO II -CL-56M-■-PN15	9.9				15	0.0024 °	18	35	0 ~ 200	2.23	740	630
Ezi-SERVO II -CL-56M-■-PN25	16.6				25	0.00144 °	27	50	0 ~ 120		870	790
Ezi-SERVO II -CL-56M-■-PN40	27.0				40	0.0009 °	27	50	0 ~ 75		1000	970
Ezi-SERVO II -CL-56M-■-PN50	27.0				50	0.00072 °	27	50	0 ~ 60		1100	1100
Ezi-SERVO II -CL-56L-■-PN3	4.0	520 x 10 ⁻⁷	3	5	3	0.012 °	18	35	0 ~ 1000	2.37	430	310
Ezi-SERVO II -CL-56L-■-PN5	6.8				5	0.0072 °	27	50	0 ~ 600		510	390
Ezi-SERVO II -CL-56L-■-PN8	10.8				8	0.0045 °	27	50	0 ~ 375		600	480
Ezi-SERVO II -CL-56L-■-PN10	13.6				10	0.0036 °	18	35	0 ~ 300		640	530
Ezi-SERVO II -CL-56L-■-PN15	18.0				15	0.0024 °	18	35	0 ~ 200	2.67	740	630
Ezi-SERVO II -CL-56L-■-PN25	27.0				25	0.00144 °	27	50	0 ~ 120		870	790
Ezi-SERVO II -CL-56L-■-PN40	27.0				40	0.0009 °	27	50	0 ~ 75		1000	970
Ezi-SERVO II -CL-56L-■-PN50	27.0				50	0.00072 °	27	50	0 ~ 60		1100	1100

* The code of encoder resolution will be marked in “■”

Specifications of Motor with Gearbox

60 mm

Unit Part Number	Maximum Holding Torque [N·m]	Rotor Inertia Moment [kg·m ²]	Backlash [arc-min]	Angle Transmission Error [arc-min]	Gear Ratio	Resolution (10,000 P/R Standard)	Permissible Torque [N·m]	Instantaneous Maximum Torque [N·m]	Permissible Speed Range [r/min]	Unit Weight [kg]	Permissible Radial Load (At Center of Axis) [N]	Permissible Axial Load [N]
Ezi-SERVO II -CL-60S-■-PN3	1.5	240 x 10 ⁻⁷	3	5	3	0.012 °	18	35	0 ~ 1000	1.84	430	310
Ezi-SERVO II -CL-60S-■-PN5	2.5				5	0.0072 °	27	50	0 ~ 600		510	390
Ezi-SERVO II -CL-60S-■-PN8	4.0				8	0.0045 °	27	50	0 ~ 375		600	480
Ezi-SERVO II -CL-60S-■-PN10	5.1				10	0.0036 °	18	35	0 ~ 300		640	530
Ezi-SERVO II -CL-60S-■-PN15	7.4				15	0.0024 °	18	35	0 ~ 200	2.13	740	630
Ezi-SERVO II -CL-60S-■-PN25	12.3				25	0.00144 °	27	50	0 ~ 120		870	790
Ezi-SERVO II -CL-60S-■-PN40	19.8				40	0.0009 °	27	50	0 ~ 75		1000	970
Ezi-SERVO II -CL-60S-■-PN50	24.7				50	0.00072 °	27	50	0 ~ 60		1100	1100
Ezi-SERVO II -CL-60M-■-PN3	2.6	490 x 10 ⁻⁷	3	5	3	0.012 °	18	35	0 ~ 1000	1.20	430	310
Ezi-SERVO II -CL-60M-■-PN5	4.4				5	0.0072 °	27	50	0 ~ 600		510	390
Ezi-SERVO II -CL-60M-■-PN8	7.0				8	0.0045 °	27	50	0 ~ 375		600	480
Ezi-SERVO II -CL-60M-■-PN10	8.8				10	0.0036 °	18	35	0 ~ 300		640	530
Ezi-SERVO II -CL-60M-■-PN15	12.8				15	0.0024 °	18	35	0 ~ 200	2.30	740	630
Ezi-SERVO II -CL-60M-■-PN25	21.4				25	0.00144 °	27	50	0 ~ 120		870	790
Ezi-SERVO II -CL-60M-■-PN40	27.0				40	0.0009 °	27	50	0 ~ 75		1000	970
Ezi-SERVO II -CL-60M-■-PN50	27.0				50	0.00072 °	27	50	0 ~ 60		1100	1100
Ezi-SERVO II -CL-60L-■-PN3	5.2	690 x 10 ⁻⁷	3	5	3	0.012 °	18	35	0 ~ 1000	2.61	430	310
Ezi-SERVO II -CL-60L-■-PN5	8.7				5	0.0072 °	27	50	0 ~ 600		510	390
Ezi-SERVO II -CL-60L-■-PN8	13.9				8	0.0045 °	27	50	0 ~ 375		600	480
Ezi-SERVO II -CL-60L-■-PN10	18.0				10	0.0036 °	18	35	0 ~ 300		640	530
Ezi-SERVO II -CL-60L-■-PN15	18.0				15	0.0024 °	18	35	0 ~ 200	2.86	740	630
Ezi-SERVO II -CL-60L-■-PN25	27.0				25	0.00144 °	27	50	0 ~ 120		870	790
Ezi-SERVO II -CL-60L-■-PN40	27.0				40	0.0009 °	27	50	0 ~ 75		1000	970
Ezi-SERVO II -CL-60L-■-PN50	27.0				50	0.00072 °	27	50	0 ~ 60		1100	1100

* The code of encoder resolution will be marked in “■”

Specifications of Motor with Gearbox

86 mm

Unit Part Number	Maximum Holding Torque [N·m]	Rotor Inertia Moment [kg·m ²]	Backlash [arc-min]	Angle Transmission Error [arc-min]	Gear Ratio	Resolution (10,000 P/R Standard)	Permissible Torque [N·m]	Instantaneous Maximum Torque [N·m]	Permissible Speed Range [r/min]	Unit Weight [kg]	Permissible Radial Load (At Center of Axis) [N]	Permissible Axial Load [N]
Ezi-SERVO II -CL-86M-■-PN3	9.6	1800 x 10 ⁻⁷	3	5	3	0.012 °	50	80	0 ~ 1000	5.74	810	930
Ezi-SERVO II -CL-86M-■-PN5	16.0				5	0.0072 °	75	125	0 ~ 600		960	1200
Ezi-SERVO II -CL-86M-■-PN8	25.7				8	0.0045 °	75	125	0 ~ 375		1100	1400
Ezi-SERVO II -CL-86M-■-PN10	32.1				10	0.0036 °	50	80	0 ~ 300		1200	1600
Ezi-SERVO II -CL-86M-■-PN15	46.6				15	0.0024 °	50	80	0 ~ 200	6.54	1200	1900
Ezi-SERVO II -CL-86M-■-PN25	75.0				25	0.00144 °	75	125	0 ~ 120		1600	2200
Ezi-SERVO II -CL-86M-■-PN40	75.0				40	0.0009 °	75	125	0 ~ 75		1900	2200
Ezi-SERVO II -CL-86M-■-PN50	75.0				50	0.00072 °	75	125	0 ~ 60		2100	2200
Ezi-SERVO II -CL-86L-■-PN3	17.1	3600 x 10 ⁻⁷	3	5	3	0.012 °	50	80	0 ~ 1000	7.33	810	930
Ezi-SERVO II -CL-86L-■-PN5	28.5				5	0.0072 °	75	125	0 ~ 600		960	1200
Ezi-SERVO II -CL-86L-■-PN8	45.6				8	0.0045 °	75	125	0 ~ 375		1100	1400
Ezi-SERVO II -CL-86L-■-PN10	50.0				10	0.0036 °	50	80	0 ~ 300		1200	1600
Ezi-SERVO II -CL-86L-■-PN15	50.0				15	0.0024 °	50	80	0 ~ 200	8.12	1200	1900
Ezi-SERVO II -CL-86L-■-PN25	75.0				25	0.00144 °	75	125	0 ~ 120		1600	2200
Ezi-SERVO II -CL-86L-■-PN40	75.0				40	0.0009 °	75	125	0 ~ 75		1900	2200
Ezi-SERVO II -CL-86L-■-PN50	75.0				50	0.00072 °	75	125	0 ~ 60		2100	2200
Ezi-SERVO II -CL-86XL-■-PN3	23.6	5400 x 10 ⁻⁷	3	5	3	0.012 °	50	80	0 ~ 1000	8.84	810	930
Ezi-SERVO II -CL-86XL-■-PN5	39.4				5	0.0072 °	75	125	0 ~ 600		960	1200
Ezi-SERVO II -CL-86XL-■-PN8	63.0				8	0.0045 °	75	125	0 ~ 375		1100	1400
Ezi-SERVO II -CL-86XL-■-PN10	50.0				10	0.0036 °	50	80	0 ~ 300		1200	1600
Ezi-SERVO II -CL-86XL-■-PN15	50.0				15	0.0024 °	50	80	0 ~ 200	9.64	1200	1900
Ezi-SERVO II -CL-86XL-■-PN25	75.0				25	0.00144 °	75	125	0 ~ 120		1600	2200
Ezi-SERVO II -CL-86XL-■-PN40	75.0				40	0.0009 °	75	125	0 ~ 75		1900	2200
Ezi-SERVO II -CL-86XL-■-PN50	75.0				50	0.00072 °	75	125	0 ~ 60		2100	2200


* The code of encoder resolution will be marked in "■"

Dimensions of Motor with Gearbox [mm]

56 mm


Unit Part Number	Motor	Stage	□ Gear Ratio	L [mm]
Ezi-SERVO II -CL-56S-■-PN□	EzM2-56S-■-PN□	Single Stage	3, 5, 8, 10	46
Ezi-SERVO II -CL-56M-■-PN□	EzM2-56M-■-PN□		3, 5, 8, 10	55
Ezi-SERVO II -CL-56L-■-PN□	EzM2-56L-■-PN□		3, 5, 8, 10	80

* The code of encoder resolution will be marked in “■”

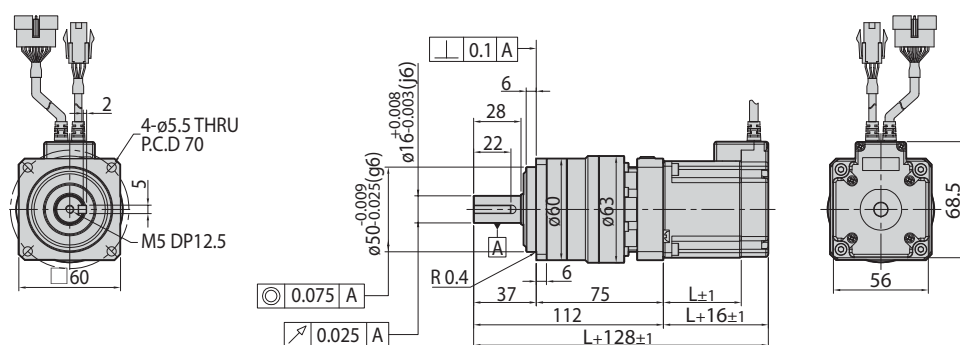

Unit Part Number	Motor	Stage	□ Gear Ratio	L [mm]
Ezi-SERVO II -CL-56S-■-PN□	EzM2-56S-■-PN□	Double Stage	15, 25, 40, 50	46
Ezi-SERVO II -CL-56M-■-PN□	EzM2-56M-■-PN□		15, 25, 40, 50	55
Ezi-SERVO II -CL-56L-■-PN□	EzM2-56L-■-PN□		15, 25, 40, 50	80

* The code of encoder resolution will be marked in “■”

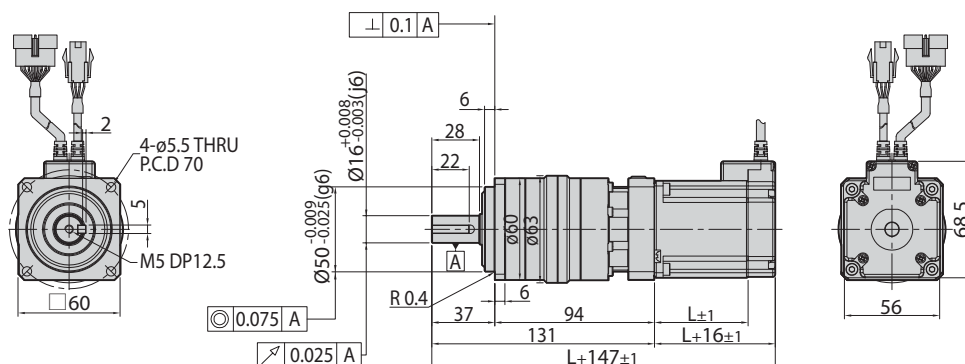


Dimensions of Motor with Gearbox [mm]

60 mm


Unit Part Number	Motor	Stage	□ Gear Ratio	L [mm]
Ezi-SERVO II -CL-60S-■-PN□	EzM2-60S-■-PN□	Single Stage	3, 5, 8, 10	47
Ezi-SERVO II -CL-60M-■-PN□	EzM2-60M-■-PN□		3, 5, 8, 10	56
Ezi-SERVO II -CL-60L-■-PN□	EzM2-60L-■-PN□		3, 5, 8, 10	85

* The code of encoder resolution will be marked in “■”

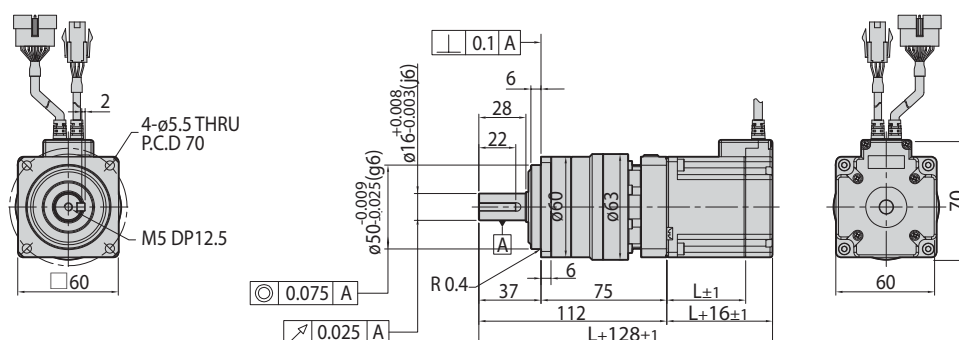

Unit Part Number	Motor	Stage	□ Gear Ratio	L [mm]
Ezi-SERVO II -CL-60S-■-PN□	EzM2-60S-■-PN□	Double Stage	15, 25, 40, 50	47
Ezi-SERVO II -CL-60M-■-PN□	EzM2-60M-■-PN□		15, 25, 40, 50	56
Ezi-SERVO II -CL-60L-■-PN□	EzM2-60L-■-PN□		15, 25, 40, 50	85


* The code of encoder resolution will be marked in “■”

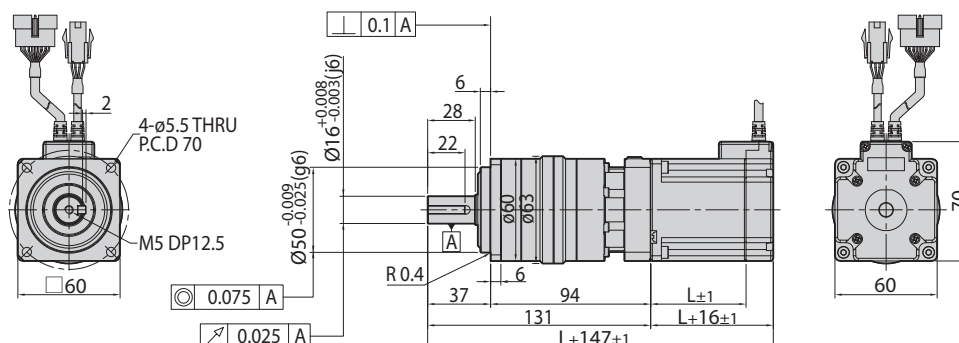

86 mm


Unit Part Number	Motor	Stage	□ Gear Ratio	L [mm]
Ezi-SERVO II -CL-86M-■-PN□	EzM2-86M-■-PN□	Single Stage	3, 5, 8, 10	78
Ezi-SERVO II -CL-86L-■-PN□	EzM2-86L-■-PN□		3, 5, 8, 10	117
Ezi-SERVO II -CL-86XL-■-PN□	EzM2-86XL-■-PN□		3, 5, 8, 10	155

* The code of encoder resolution will be marked in “■”

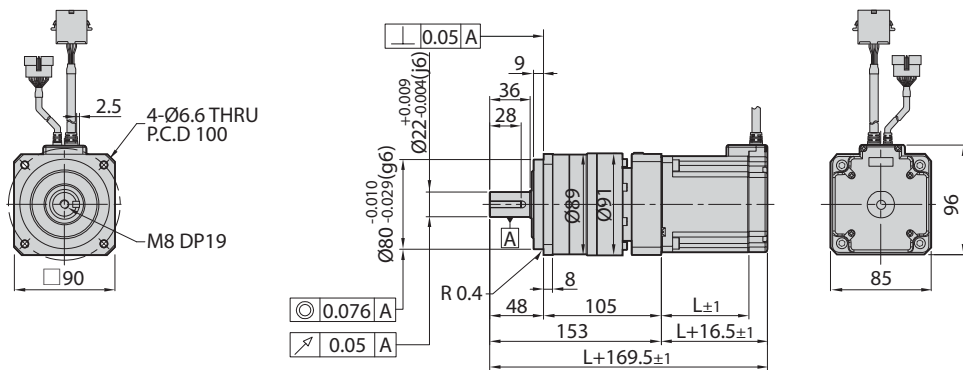


Unit Part Number	Motor	Stage	□ Gear Ratio	L [mm]
Ezi-SERVO II -CL-86M-■-PN□	EzM2-86M-■-PN□	Double Stage	15, 25, 40, 50	78
Ezi-SERVO II -CL-86L-■-PN□	EzM2-86L-■-PN□		15, 25, 40, 50	117
Ezi-SERVO II -CL-86XL-■-PN□	EzM2-86XL-■-PN□		15, 25, 40, 50	155


* The code of encoder resolution will be marked in “■”

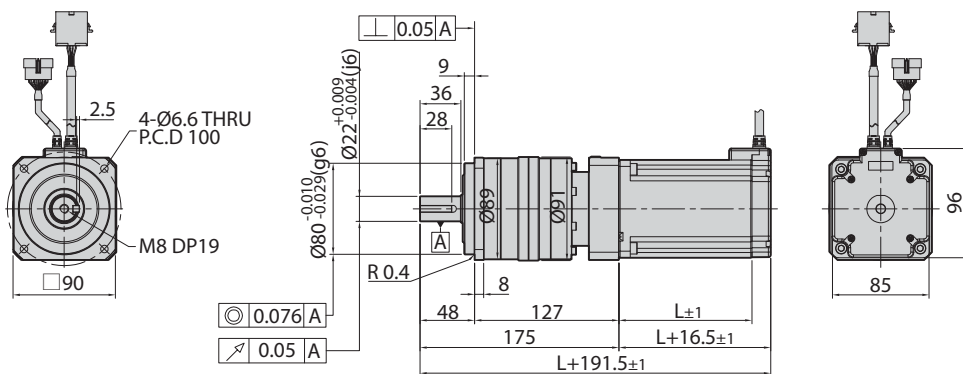

Settings and Operation

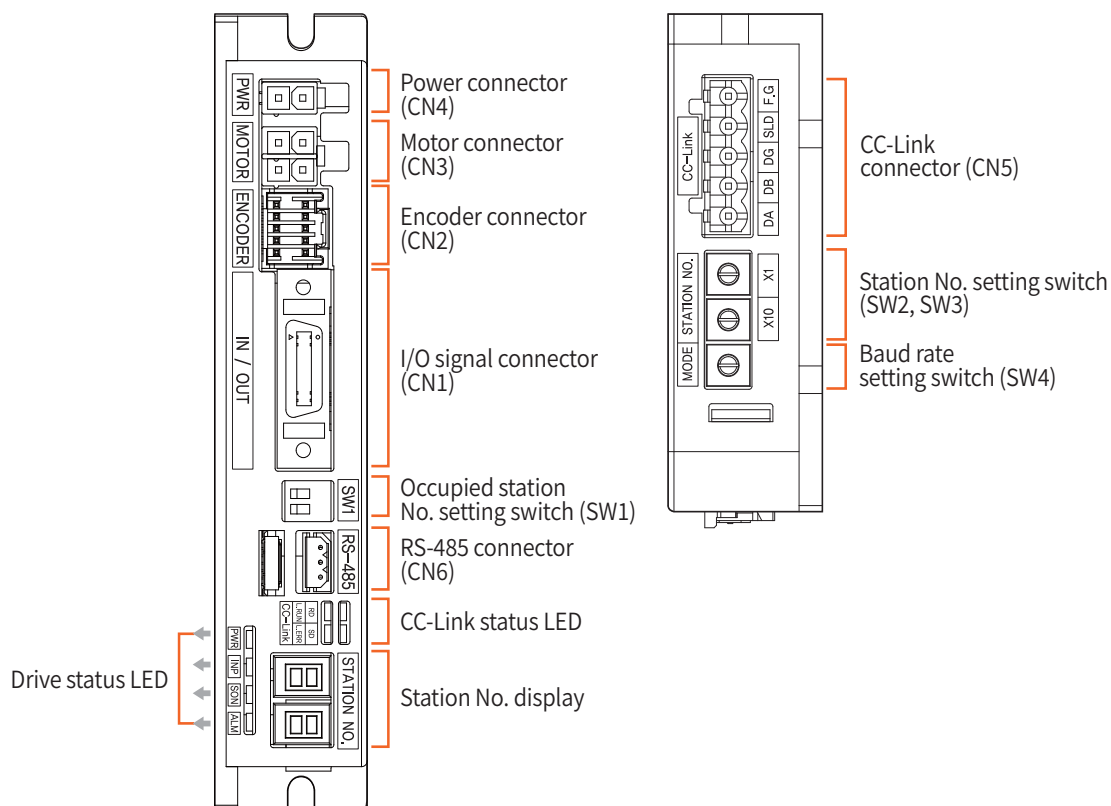


86 mm Motor Drive (EzS2-CL-86 series)

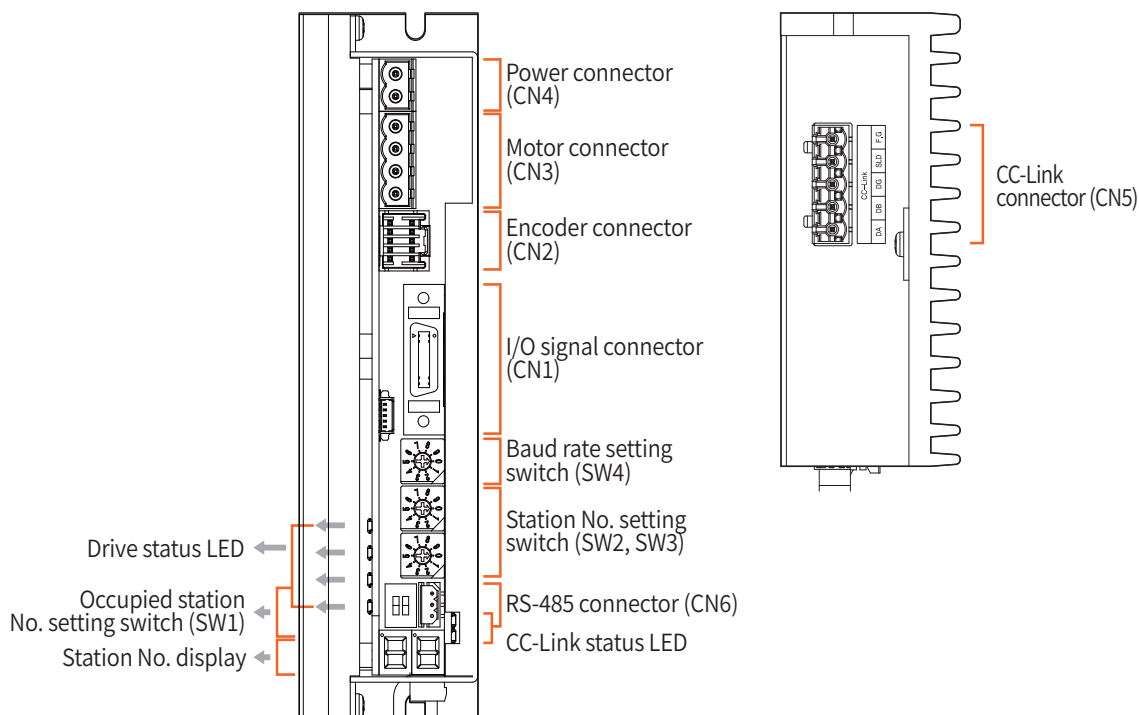

1. Station No. Display and Setting Switch(SW2, SW3)

These switches set the station number of the device station in decimal number.
SW2 sets the units digit (X1) and SW3 sets the tens digit (X10).

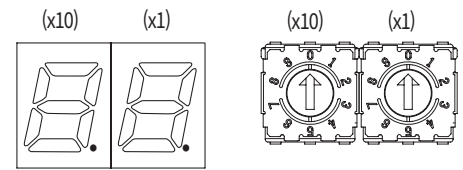


2. CC-Link Status LED

Indicator	Color	Status	Description
L.RUN	Green	OFF	Power OFF or Data Link is not running
		ON	Data Link is running

Indicator	Color	Status	Description
L.ERR	Red	OFF	No Error
		ON	Data Link Error
		Flashing at regular intervals	Communication Error
		Flashing at irregular intervals	CRC Error or Network Cable Error

Indicator	Color	Status	Description
RD	Orange	OFF	No data received
		ON	Receiving Data

Indicator	Color	Status	Description
SD	Yellow	OFF	No data transmitted
		ON	Transmitting Data

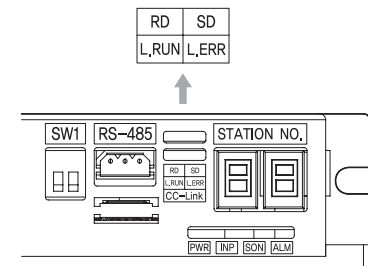

3. Drive Status LED

Indicator	Color	Function	Description
PWR	Green	Power Input Indication	LED is turned ON when power is applied.
INP	Yellow	Positioning Complete Signal Indication	LED is turned ON when Positioning error reaches within the preset pulse after the positioning is complete.
SON	Orange	Servo ON / OFF Indication	Servo ON: Lights ON, Servo OFF: Lights OFF
ALM	Red	Alarm Indication	LED blinks when an error occurs.

List of error types by the number of alarm LED blinking

No.	Error Code ^{*4}	Error Type	Causes
1	E-□01	Over Current Error	The current through power devices in drive exceeds the limit. ^{*1}
2	E-□02	Over Speed Error	The motor speed exceeds 3,000 r/min.
3	E-□03	Position Tracking Error	Position error value is greater than the reference value while the motor is running. ^{*2}
4	E-□04	Over Load Error	The motor is continuously operated more than 5 seconds under a load exceeding the Max. torque.
5	E-□05	Over Temperature Error	Internal temperature of the drive exceeds 85 °C.
6	E-□06	Over Regenerative Voltage Error	Back-EMF is higher than limit value. ^{*3}
7	E-□07	Motor Connect Error	There is a problem with the connection between the drive and the motor.
8	E-□08	Encoder Connect Error	There is a problem with the connection between the drive and the encoder.
10	E-□0A	In-Position Error	After operation is finished, position error larger than 1 pulse is continued for more than 3 seconds.
12	E-□0C	ROM Error	Error occurs in parameter storage device(ROM).
15	E-□0F	Position Overflow Error	Position error value is greater than the reference value while the motor is stopped ^{*2}

^{*1}: Limit value depends on motor model. (Refer to the Manual)

^{*2}: The default reference value is 180°, and it can be changed by parameter. (Refer to the Manual)

^{*3}: Voltage limit of Back-EMF depends on motor model. (Refer to the Manual)

^{*4}: When an alarm occurs, error code is displayed on the 7-segment LED display instead of Station No.

※ Please refer to user Manual for the details of protection functions.

※ □ refers to CC-Link error code.

CC-Link Error Code


Error Code	Description
E-0□□.	Normal operation.
E-1□□.	Station No. switch setting is set incorrectly.
E-2□□.	Baud rate setting is set incorrectly.
E-3□□.	Station No. is changed during the operation.
E-4□□.	Baud rate is changed during the operation.
E-5□□.	CRC error
E-6□□.	Timeout error occurred during the communication with the master.
E-7□□.	Connection was lost during communication with the master.
E-8□□.	CC-Link Processor Error 1
E-9□□.	CC-Link Processor Error 2
E-A□□.	Data link error
E-B□□.	Remote I/O error
E-C□□.	Remote register error

※ □□ refers to drive alarm status

4. Baud Rate Setting Switch(SW4)

This switch sets the baud rate.
(‘MODE’ is marked on the case.)

MODE	Baud Rate
0	156 kbps
1	625 kbps
2	2.5 Mbps
3	5 Mbps
4	10 Mbps
5	NONE
6	NONE
7	NONE
8	NONE
9	NONE



5. Occupied Station No. setting Switch(SW1)


This switch sets the number of occupied stations.

SW1.1	SW1.2	No. of Occupied Station
OFF	OFF	1 Station Occupied
ON	OFF	2 Station Occupied
OFF	ON	3 Station Occupied




6. I/O Signal Connector(CN1)

No.	Function	I/O
1	LIMIT+	Input
2	LIMIT-	Input
3	ORIGIN	Input
4	Digital In1	Input
5	Digital In2	Input
6	Digital In3	Input
7	Digital In4	Input
8	Digital In5	Input
9	Digital In6	Input
10	Digital In7	Input
11	Digital Out1	Output
12	Digital Out2	Output
13	Digital Out3	Output
14	Digital Out4	Output
15	Digital Out5	Output
16	Digital Out6	Output
17	BRAKE+	Output
18	BRAKE-	Output
19	EXT_GND	Input
20	EXT_24 V DC	Input

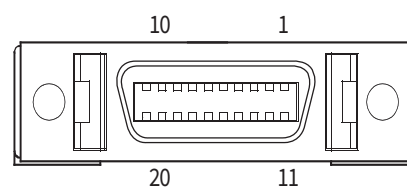


7. Encoder Connector(CN2)

No.	Function	I/O
1	A+	Input
2	A-	Input
3	B+	Input
4	B-	Input
5	Z+	Input
6	Z-	Input
7	5 V DC	Output
8	GND	Output
9	F.GND	----
10	F.GND	----

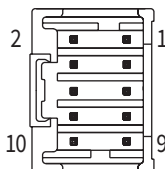


11. RS-485 Connector(CN6)

No.	Function
1	Data+
2	Data-
3	GND




8. Motor Connector(CN3)

No.	Function	I/O
1	A Phase	Output
2	B Phase	Output
3	$\bar{A}$ Phase	Output
4	$\bar{B}$ Phase	Output



No.	Function	I/O
1	$\bar{B}$ Phase	Output
2	B Phase	Output
3	$\bar{A}$ Phase	Output
4	A Phase	Output



※ 86 mm Motor Drive

9. Power Connector(CN4)

No.	Function	I/O
1	24 V DC	Input
2	GND	Input




No.	Function	I/O
1	GND	Input
2	40 ~ 70 V DC	Input




※ 86 mm Motor Drive

10. CC-Link Connector(CN5)

No.	Function
1	DA
2	DB
3	DG
4	SLD
5	F.GND

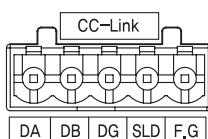

System Configuration

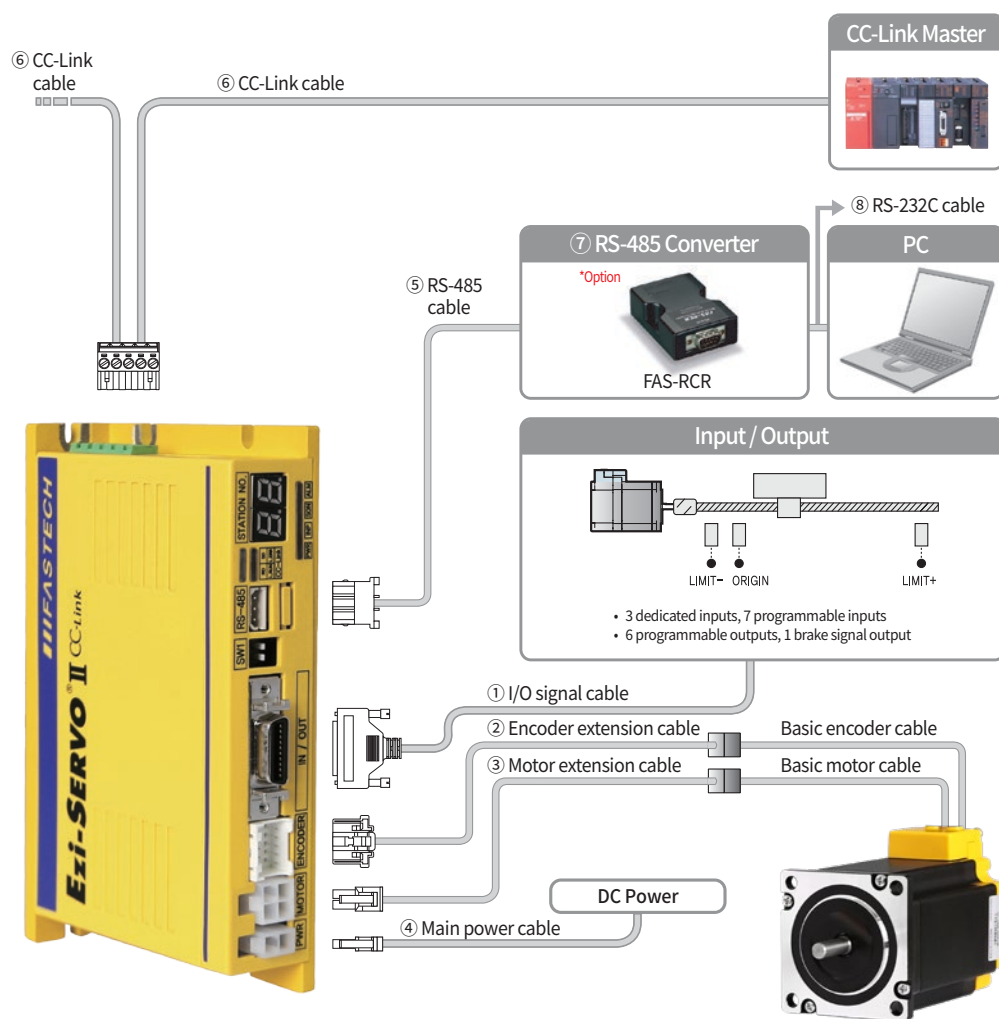

Cable Type	Max. Cable Length	Remarks
① I/O Signal Cable	20 m	Options (Sold separately)
② Encoder Extension Cable	20 m	
③ Motor Extension Cable	20 m	
④ Main Power Cable	2 m	
⑤ CC-Link Cable	100 m	
⑥ RS-485 Cable	2 m	Basic cables are attached to motors.
Basic Encoder Cable	0.3 m (Basic length)	
Basic Motor Cable	0.3 m (Basic length)	

1. Accessories

Connectors

These are connector specifications for drive cabling.

Purpose		Item	Part Number	Manufacturer
Main Power (CN4)		Housing	5557-02R	MOLEX
		Terminal	5556T	
Motor	Drive Side (CN3)	Housing	5557-04R	MOLEX
		Terminal	5556T	
	Motor Side	Housing	5557-04R	MOLEX
		Terminal	5556T	
Encoder	Drive Side (CN2)	Housing	51353-1000	MOLEX
		Terminal	56134-9000	
	Encoder Side	Housing	SMP-09V-NC	JST
		Terminal	SHF-001T-0.8BS	
I/O Signal (CN1)		Connector	10120-3000PE (DF02P020F22A1)	3M (JAE)
		Connector Cover	10320-52A0-008 (DF02D020B22)	
CC-Link (CN5)		Terminal Block	AK950-5	PTR
RS-485 (CN6)		Housing	5264-03	MOLEX
		Terminal	5263PBT	

※ The connectors above are supplied with the product. If you are using other parts, please make sure they meet the specifications.

2. Options

① I/O Signal Cable

These are the cables to connect Ezi-SERVO II CC-Link drive and other input / output devices.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive - I/O Device Connection	CSVN-S-001F	1	Fixed Cable	Max. Cable Length: 20 m
	CSVN-S-002F	2		
	CSVN-S-003F	3		
	CSVN-S-005F	5		
	CSVN-S-001M	1	Flexible Cable	
	CSVN-S-002M	2		
	CSVN-S-003M	3		
	CSVN-S-005M	5		

* If you need cables with length (in units of 1 m) not listed on the table, please contact FASTECH for more information.

② Encoder Extension Cable

These are the cables to connect Ezi-SERVO II CC-Link drive and the encoder.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive - Basic Encoder Cable Connection	CSVO-E-001F	1	Fixed Cable	Max. Cable Length: 20 m
	CSVO-E-002F	2		
	CSVO-E-003F	3		
	CSVO-E-005F	5		
	CSVO-E-001M	1	Flexible Cable	
	CSVO-E-002M	2		
	CSVO-E-003M	3		
	CSVO-E-005M	5		

* If you need cables with length (in units of 1 m) not listed on the table, please contact FASTECH for more information.

③ Motor Extension Cable

These are the cables to connect Ezi-SERVO II CC-Link drive and the motor.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive - Basic Motor Cable Connection	CSVO-M-001F	1	Fixed Cable	Max. Cable Length: 20 m
	CSVO-M-002F	2		
	CSVO-M-003F	3		
	CSVO-M-005F	5		
	CSVO-M-001M	1	Flexible Cable	
	CSVO-M-002M	2		
	CSVO-M-003M	3		
	CSVO-M-005M	5		

* If you need cables with length(in units of 1 m) not listed on the table, please contact FASTECH for more information.

④ Main Power Cable

These are the cables to connect Ezi-SERVO II CC-Link drive and the main power.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive - Power Connection	CSVO-P-001F	1	Fixed Cable	Max. Cable Length: 2 m
	CSVO-P-002F	2		
	CSVO-P-001M	1	Flexible Cable	
	CSVO-P-002M	2		

⑤ RS-485 Cable

Purpose	Part Number	Length [m]	Remarks
RS-485 Connection	CGNR-RT-001F	1	Fixed Cable
	CGNR-RT-002F	2	
	CGNR-RT-003F	3	
	CGNR-RT-005F	5	

* If you need cables with length(in units of 1m) not listed on the table or robot cables, please contact FASTECH for more information.

⑥ CC-Link Cable

It is the cable to connect Ezi-SERVO II CC-Link drive and the CC-Link system.

* This cable is not provided by FASTECH. It is recommended to use the standard cable specified by the CC-Link Association.

⑦ RS-485 Converter

Purpose	Part Number	Specifications		Product Image
RS-232C to RS-485 Converter	FAS-RCR	Baud Rate	Max. 115.2 kbps	
		Comm. Distance	RS-232C: Max. 15 m RS-485: Max. 1.2 km	
		Connector	RS-232C: DB9 Female RS-485: RJ-45	
		Dimensions	50 X 75 X 23 mm	
		Weight	38 g	
		Power	Power supplied by RS-232C (5 ~ 24 V DC external power can be applied)	

⑧ RS-232C Cable

These are the cables to connect FAS-RCR and RS-232C port of the master controller.

Purpose	Part Number	Length [m]	Cable Type
FAS-RCR—RS-232C Connection	CGNR-C-002F	2	Fixed Cable
	CGNR-C-003F	3	
	CGNR-C-005F	5	

[Option] TB-Plus Interface Board

This is an interface board to connect Ezi-SERVO II CC-Link drive and I/O signals more conveniently.

Purpose	Part Number	Product Image
Interface Board between Drive and I/O Signals	TB-Plus	


[Option] TB-Plus Interface Cable

These are the cables to connect Ezi-SERVO II CC-Link drive and TB-Plus interface board.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive - Interface(TB-Plus) Connection	CIFN-S-001F	1	Fixed Cable	Max. Cable Length: 20 m
	CIFN-S-002F	2		
	CIFN-S-003F	3		
	CIFN-S-005F	5		
	CIFN-S-001M	1	Flexible Cable	
	CIFN-S-002M	2		
	CIFN-S-003M	3		
	CIFN-S-005M	5		

* If you need cables with length(in units of 1 m) not listed on the table, please contact FASTECH for more information.

System Configuration [86 mm Motor Drive]

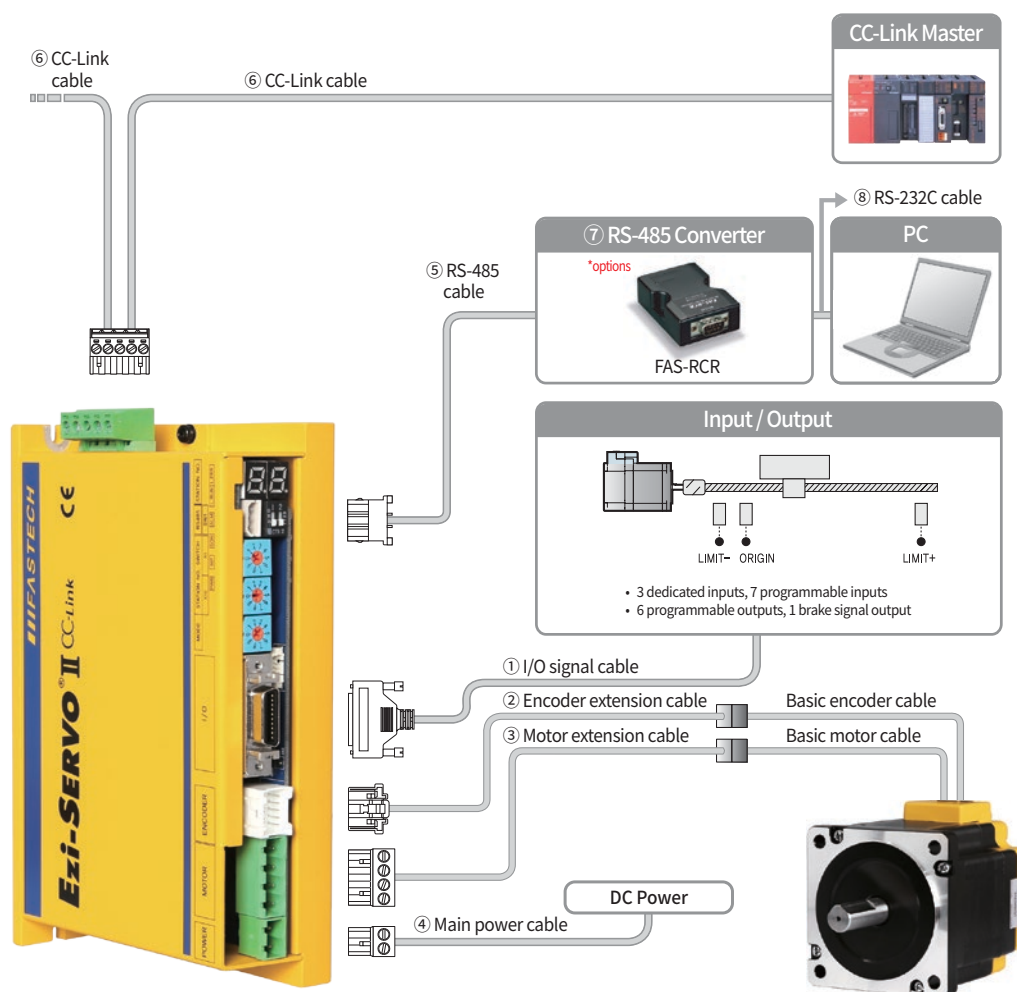

Cable Type	Max. Cable Length	Remarks
① I/O Signal Cable	20 m	Options (Sold separately)
② Encoder Extension Cable	20 m	
③ Motor Extension Cable	20 m	
④ Main Power Cable	2 m	
⑤ CC-Link Cable	100 m	
⑥ RS-485 Cable	2 m	Basic cables are attached to motors.
Basic Encoder Cable	0.3 m (Basic length)	
Basic Motor Cable	0.3 m (Basic length)	

1. Accessories

Connectors

These are connector specifications for drive cabling.

Purpose		Item	Part Number	Manufacturer
Main Power (CN4)		Terminal Block	AK950-2	PTR
Motor	Drive Side (CN3)	Terminal Block	AK950-4	PTR
	Motor Side	Housing	5557-04R	MOLEX
		Terminal	5556T	
Encoder	Drive Side (CN2)	Housing	51353-1000	MOLEX
		Terminal	56134-9000	
	Encoder Side	Housing	SMP-09V-NC	JST
		Terminal	SHF-001T-0.8BS	
I/O Signal (CN1)		Connector	10120-3000PE (DF02P020F22A1)	3M (JAE)
		Connector Cover	10320-52A0-008 (DF02D020B22)	
CC-Link (CN5)		Terminal Block	5263PBT AK950-5	PTR
RS-485 (CN6)		Housing	5264-03	MOLEX
		Terminal	5263PBT	

※ The connectors above are supplied with the product. If you are using other parts, please make sure they meet the specifications.

2. Options

① I/O Signal Cable

These are the cables to connect Ezi-SERVO II CC-Link drive and other input / output devices.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive - I/O Device Connection	CSVN-S-001F	1	Fixed Cable	Max. Cable Length: 20 m
	CSVN-S-002F	2		
	CSVN-S-003F	3		
	CSVN-S-005F	5		
	CSVN-S-001M	1	Flexible Cable	
	CSVN-S-002M	2		
	CSVN-S-003M	3		
	CSVN-S-005M	5		

* If you need cables with length(in units of 1 m) not listed on the table, please contact FASTECH for more information.

② Encoder Extension Cable

These are the cables to connect Ezi-SERVO II CC-Link drive and the encoder.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive - Basic Encoder Cable Connection	CSVO-E-001F	1	Fixed Cable	Max. Cable Length: 20 m
	CSVO-E-002F	2		
	CSVO-E-003F	3		
	CSVO-E-005F	5		
	CSVO-E-001M	1	Flexible Cable	
	CSVO-E-002M	2		
	CSVO-E-003M	3		
	CSVO-E-005M	5		

* If you need cables with length(in units of 1 m) not listed on the table, please contact FASTECH for more information.

③ Motor Extension Cable

These are the cables to connect Ezi-SERVO II CC-Link drive and the motor.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive - Basic Motor Cable Connection	CSVP-M-001F	1	Fixed Cable	Max. Cable Length: 20 m
	CSVP-M-002F	2		
	CSVP-M-003F	3		
	CSVP-M-005F	5		
	CSVP-M-001M	1	Flexible Cable	
	CSVP-M-002M	2		
	CSVP-M-003M	3		
	CSVP-M-005M	5		

* If you need cables with length(in units of 1 m) not listed on the table, please contact FASTECH for more information.

④ Main Power Cable

These are the cables to connect Ezi-SERVO II CC-Link drive and the main power.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive - Power Connection	CSVP-P-001F	1	Fixed Cable	Max. Cable Length: 2 m
	CSVP-P-002F	2		
	CSVP-P-001M	1	Flexible Cable	
	CSVP-P-002M	2		

⑤ RS-485 Cable

Purpose	Part Number	Length [m]	Remarks
RS-485 Connection	CGNR-RT-001F	1	Fixed Cable
	CGNR-RT-002F	2	
	CGNR-RT-003F	3	
	CGNR-RT-005F	5	

* If you need cables with length(in units of 1m) not listed on the table or robot cables, please contact FASTECH for more information.

⑥ CC-Link Cable

It is the cable to connect Ezi-SERVO II CC-Link drive and the CC-Link system.

* This cable is not provided by FASTECH. It is recommended to use the standard cable specified by the CC-Link Association.

⑦ RS-485 Converter

Purpose	Part Number	Specifications		Product Image
RS-232C to RS-485 Converter	FAS-RCR	Baud Rate	Max. 115.2 kbps	
		Comm. Distance	RS-232C: Max. 15 m RS-485: Max. 1.2 km	
		Connector	RS-232C: DB9 Female RS-485: RJ-45	
		Dimensions	50 X 75 X 23 mm	
		Weight	38 g	
		Power	Power supplied by RS-232C (5 ~ 24 V DC external power can be applied)	


⑧ RS-232C Cable

These are the cables to connect FAS-RCR and RS-232C port of the master controller.

Purpose	Part Number	Length [m]	Cable Type
FAS-RCR—RS-232C Connection	CGNR-C-002F	2	Fixed Cable
	CGNR-C-003F	3	
	CGNR-C-005F	5	

[Option] TB-Plus Interface Board

This is an interface board to connect Ezi-SERVO II CC-Link drive and I/O signals more conveniently.

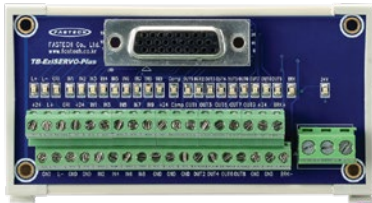Purpose	Part Number	Product Image
Interface Board between Drive and I/O Signals	TB-Plus	


[Option] TB-Plus Interface Cable

These are the cables to connect Ezi-SERVO II CC-Link drive and TB-Plus interface board.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive - Interface(TB-Plus) Connection	CIFN-S-001F	1	Fixed Cable	Max. Cable Length: 20 m
	CIFN-S-002F	2		
	CIFN-S-003F	3		
	CIFN-S-005F	5		
	CIFN-S-001M	1	Flexible Cable	
	CIFN-S-002M	2		
	CIFN-S-003M	3		
	CIFN-S-005M	5		

* If you need cables with length(in units of 1 m) not listed on the table, please contact FASTECH for more information.

External Wiring Diagram

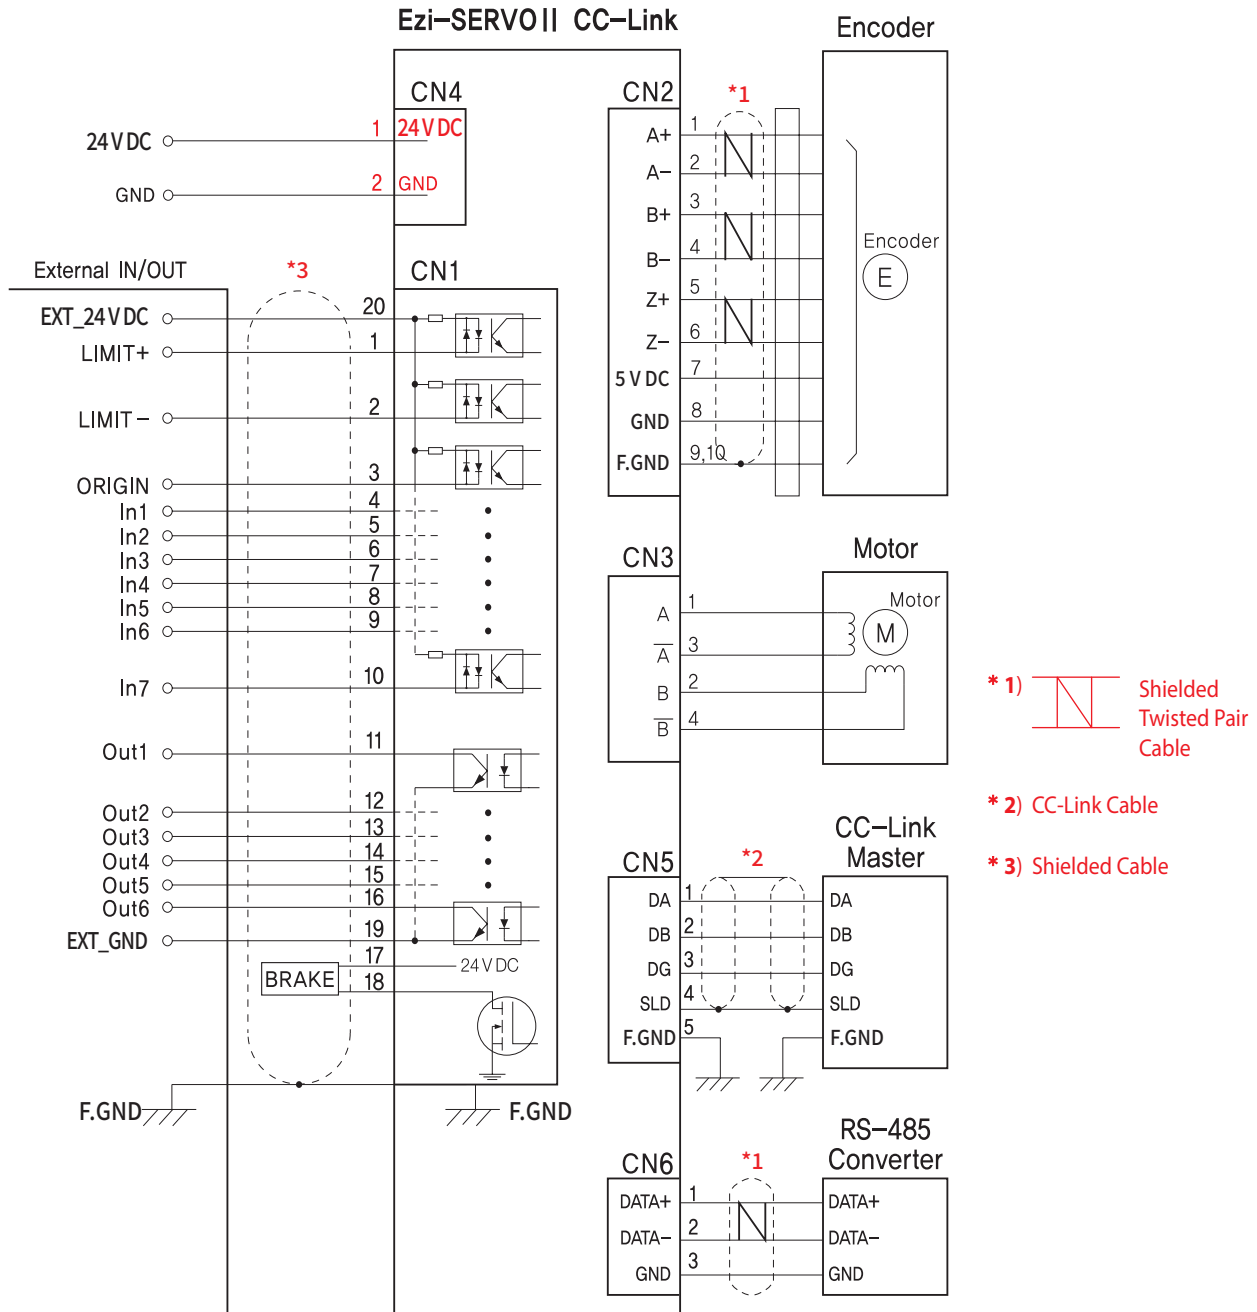


※ When connecting the I/O cable between the drive and the host controller, be sure to turn off the power to both the host controller and the drive. Failure to do so may result in electric shock or product damage.

CAUTION

To ensure the safe and proper use of the products listed in this catalog, please be sure to read the user manual thoroughly before use.

External Wiring Diagram [86 mm Motor Drive]

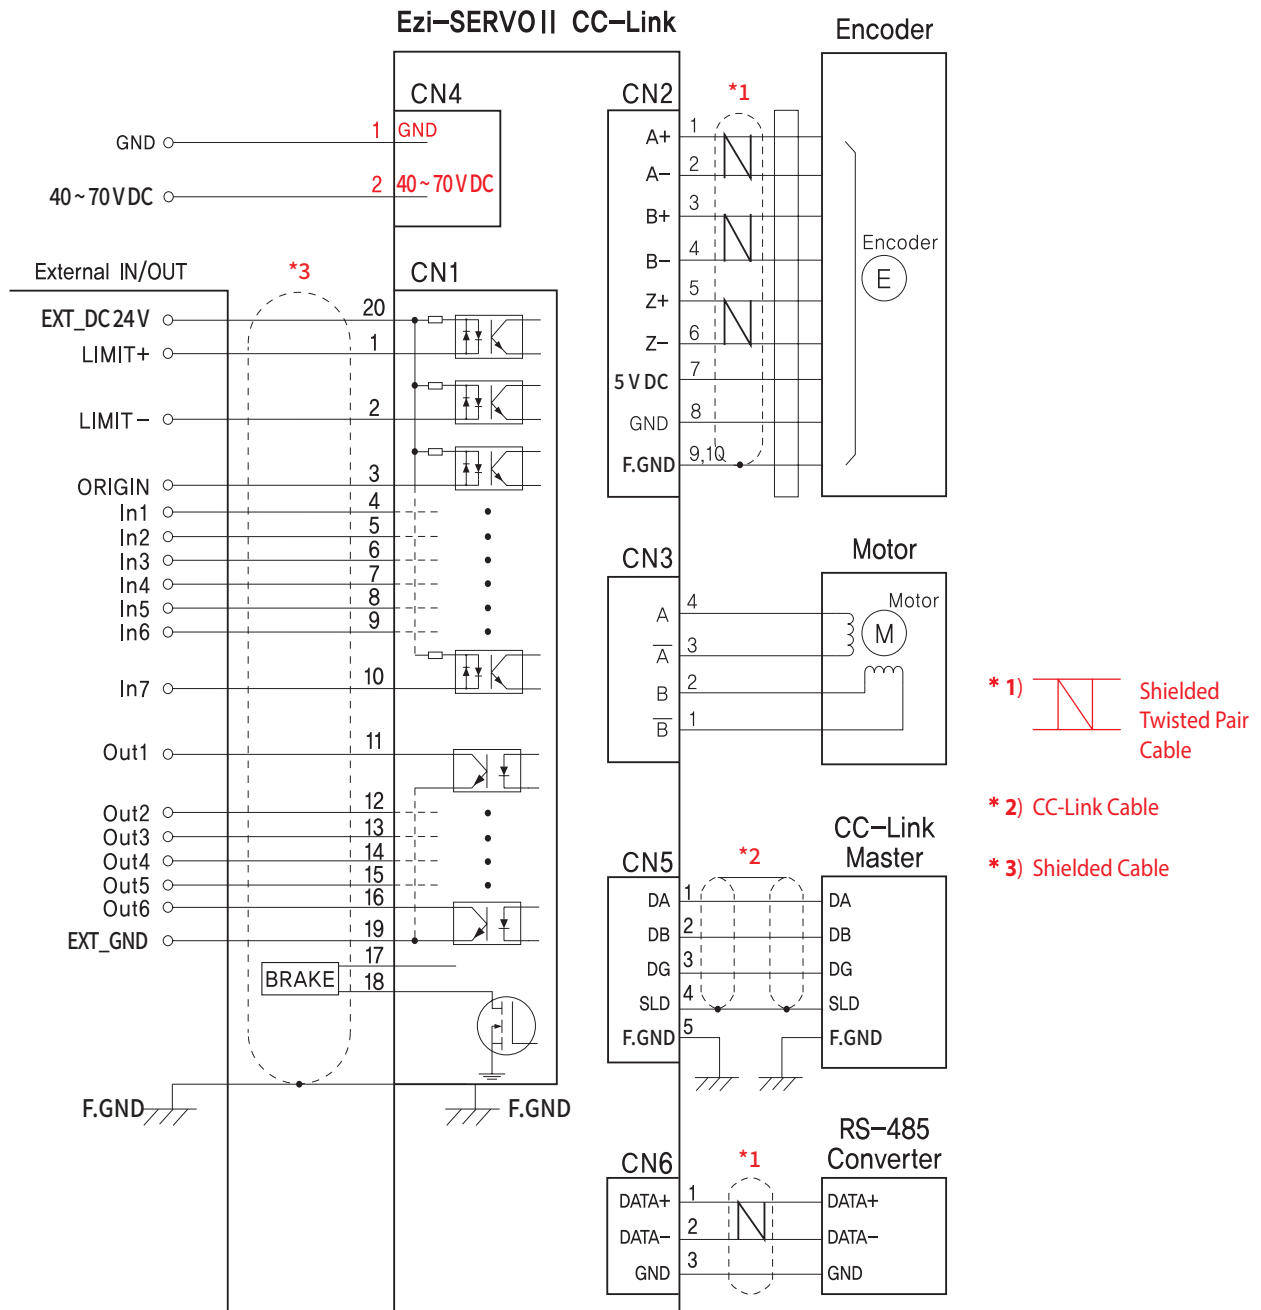

※ When connecting the I/O cable between the drive and the host controller, be sure to turn off the power to both the host controller and the drive. Failure to do so may result in electric shock or product damage.

CAUTION

To ensure the safe and proper use of the products listed in this catalog, please be sure to read the user manual thoroughly before use.

MEMO



Fast Accurate Smooth Motion

FASTECH Co., Ltd.

FASTECH Headquarters: (Postal Code:14502) Rm#1201 ~ 1202, 401-dong, Bucheon Techno-Park,
655 Pyeongcheon-ro, Wonmi-gu, Bucheon-si, Gyeonggi-do, Republic of Korea
TEL : +82-32-234-6317 FAX : +82-32-234-6302 E-mail : sales@fastech-motions.com

FASTECH JAPAN : (〒 450-0001 Aichi) Nagoya, Nakamura Ward, Nagono, 1-Chome 47-1
Nagoya International Center Bldg. 18rd Floor
TEL : +81-70-6588-5905 E-Mail : sales_japan@fastech-motions.com

Homepage : www.fastech-motions.com

※ Please note that the color and size of the products in this catalog may different depending on the measurement method
and the specifications can be changed without prior notice for quality improvement.